

IP65 High Bay Dual Sense Sensor



HIM32

HF and PIR, Daylight Harvest with Remote Control

Technical Data

Input Characteristics

Model No.	HIM32
Mains voltage	220-240VAC 50/60Hz
Stand-by power	<1W
Max withstandable in-rush current	80A@160µs
Load ratings:	
Capacitive	800VA
Resistive	1000W
Warming-up	30s

Environment

Operation temperature	Ta: -20°C ~ +50°C
IP rating	IP65

Sensor Data

Model No.	HIM32
Sensor principle	High Frequency (microwave), PIR
Operation frequency	5.8GHz +/- 75MHz (HF)
Transmission power	<0.2mW (HF)
Sensor mode	4 modes: PIR, HF, PIR+HF, PIR/HF
Detection area (Max.)*	Max installation height: 15m (forklift)/12m (human) Max detection range: HF: Ø = 24m (forklift)/14m (human) PIR: Ø = 24m (forklift)/20m (human)
Detection angle	360°




Safety and EMC

EMC standard (EMC)	EN55015, EN61547, EN61000-3-2/-3-3
Safety standard (LVD)	EN60669-1/-2-1, AS/NZS60669-1/-2-1
Radio Equipment (RED)	EN300440, EN301489-1/-3, EN62479, EN50663
Certification	CE, EMC, RED, RCM, UKCA




Mechanical Structures and Installations

For more details, please refer to user manual.




A. Ceiling mount (HIM32A)

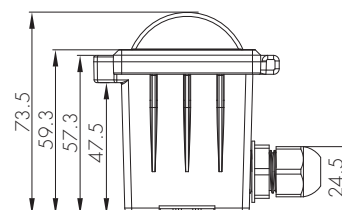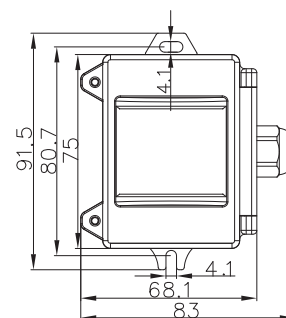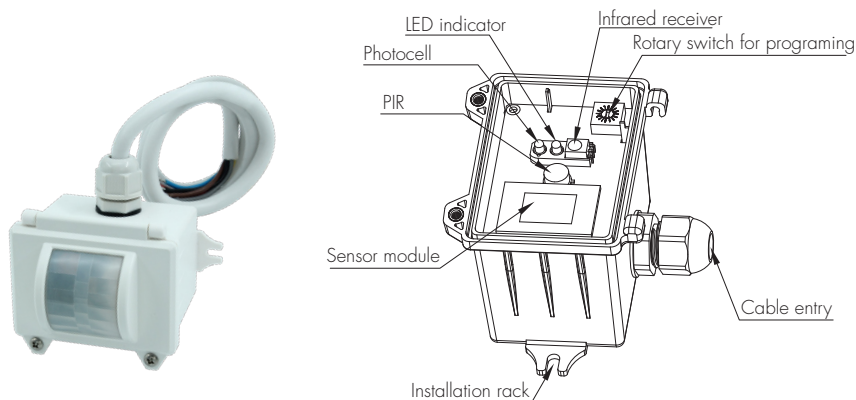

B. Screw to the Luminaire by conduit (HIM32B)

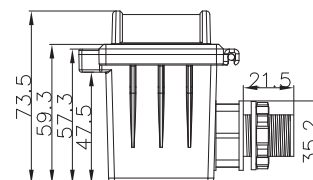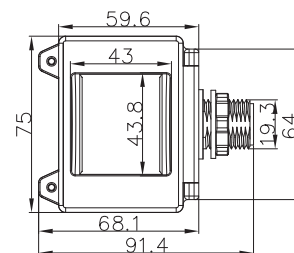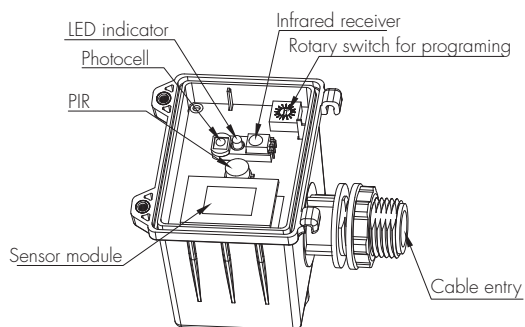


C. Attach to the shade by clamp (HIM32C)

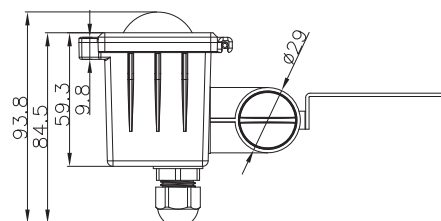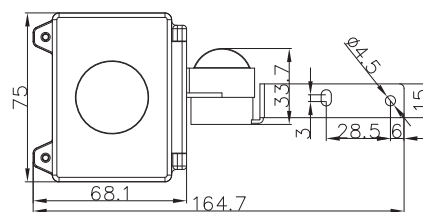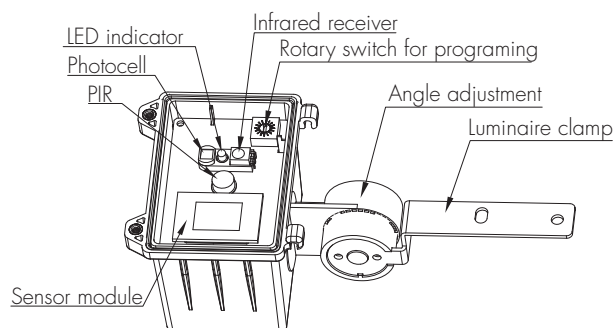

Note: We recommend the mounting distance between sensor to sensor should be more than 2m to prevent sensors from false-triggering.


Detection Pattern

End user can choose the suitable PIR lens in real application to fulfill various requirements. Three options are offered for selection:

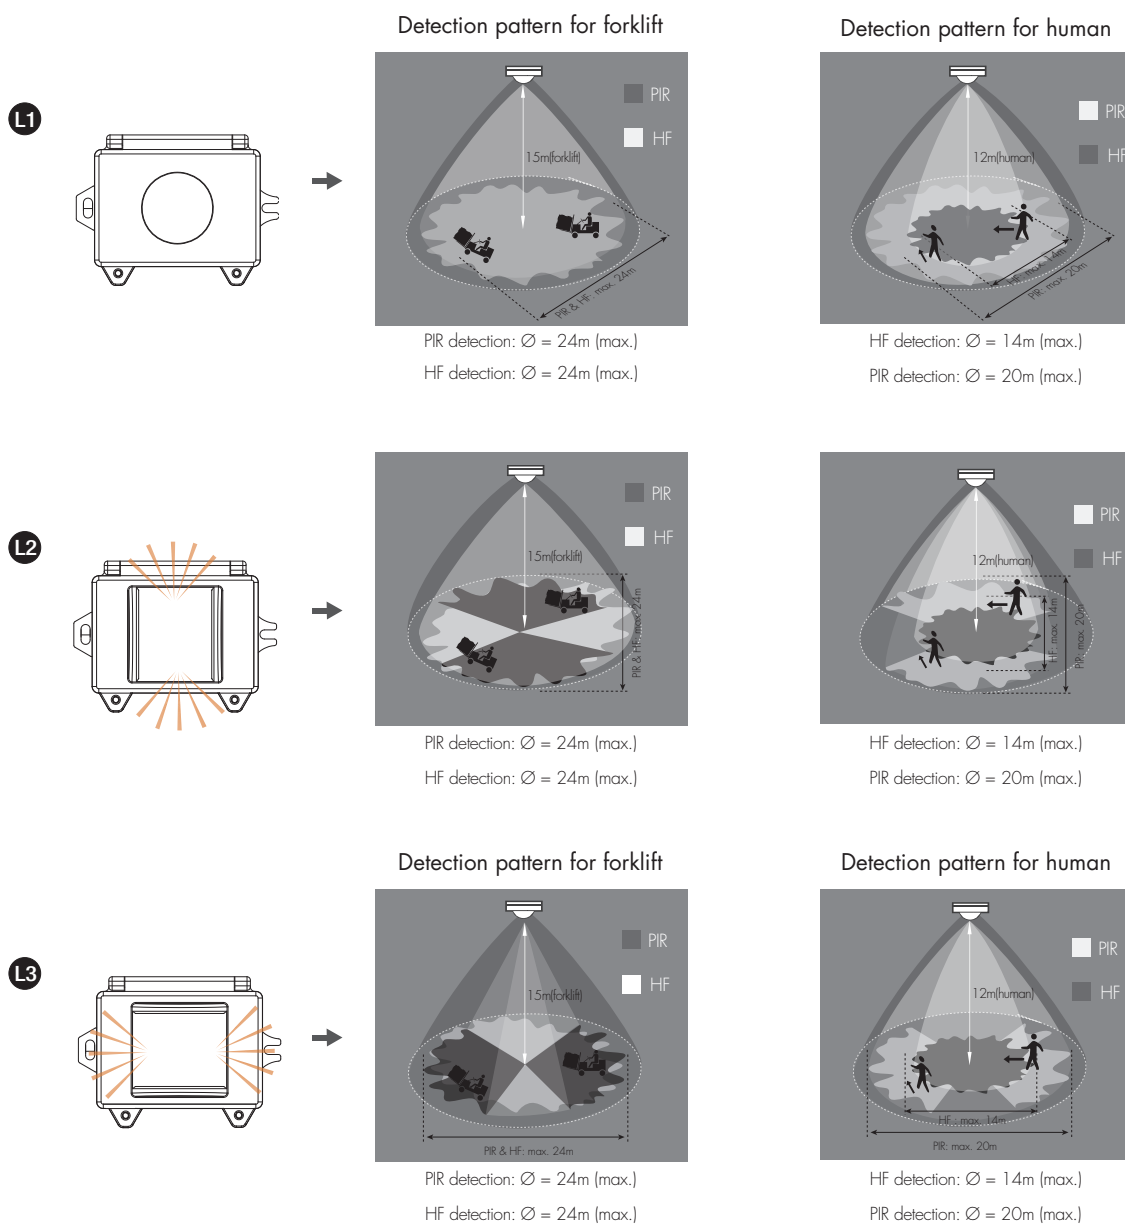

* For single person walking across, the detection range is reduced by 1/3.

Wiring Diagram

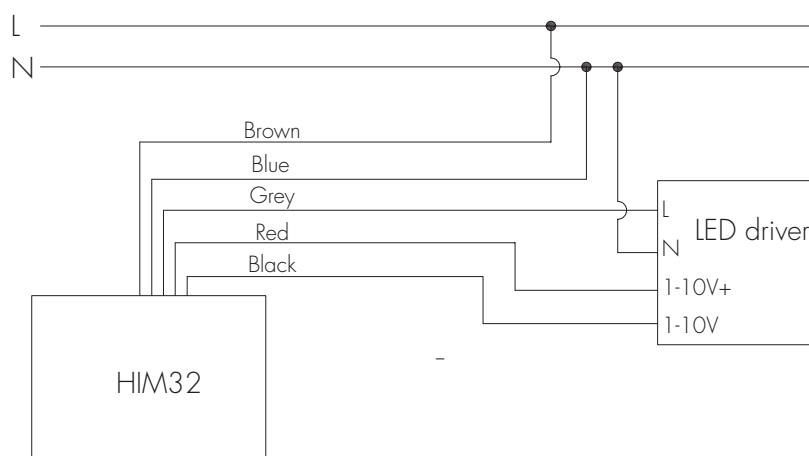

Rotary Switch Preset

A rotary switch is built inside the sensor for scene selection / fast programming. Total 16 channels are available:



Rotary switch preset

Note: settings can also be changed by remote control HRC-11. The last action controls.

Channel	Detection range	Hold-time	Daylight sensor	Stand-by time	Stand-by dim level
0	100%	5s	Disable	10s	10%
1	100%	1min	50Lux	5min	10%
2	100%	5min	50Lux	10min	10%
3	100%	5min	75Lux	+∞	10%
4	100%	5min	100Lux	+∞	10%
5	100%	5min	200Lux	+∞	30%
6	100%	10min	50Lux	30min	10%
7	100%	10min	75Lux	+∞	10%
8	100%	10min	100Lux	+∞	10%
9	100%	10min	200Lux	+∞	30%
A	100%	20min	100Lux	1h	10%
B	100%	20min	200Lux	+∞	30%
C	100%	30min	100Lux	+∞	10%
D	100%	30min	200Lux	+∞	30%
E	100%	30min	400Lux	+∞	50%
F	100%	5s	100Lux	10s	10%

4 optional detection modes via remote control:

- * HF: Microwave only
- * PIR: PIR mode only
- * HF+PIR: both PIR and microwave mode, to decrease the detection capability and detection area. Only when both detections are activated, the motion is considered valid. This is to prevent the sensor from false trigger by heat source, air conditioner, ventilation fans, water pipe and elevators etc...
- * HF/PIR: either PIR or microwave mode, to increase the detection capability and detection area;



Dual Sense Introduction

It's commonly known Microwave and Infrared are main detecting technologies in lighting controls. Both have the advantage and disadvantage for industrial applications.

Advantage

- * sensitive to minor motion.
- * sensitive to radial movement.
- * can be reflected by objects hence covering big detection area
- * resilient to heat source, smoke and air conditioner.



Disadvantage

- * penetrates walls, picks up motions outside of the office area;
- * back wave detection, false trigger by motions at the back.
- * can be false triggered by ventilation fans, water pipe, elevators etc. in industrial application.

Advantage

- * no penetration, confined detection area.
- * sensitive to tangential movement.
- * resilient to motion object which has no heat radiation.



Disadvantage


- * can be false triggered by air conditioner, smoke and other heat sources.

The remedy is to create Dual Sense by combining both technologies to make use of the advantage and bypass the disadvantage.


1 Daylight Harvest







Light will not switch on when natural light is sufficient, even there is motion detected.

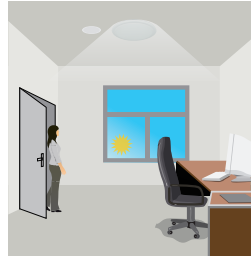


The light switches on automatically with presence when natural light is insufficient.

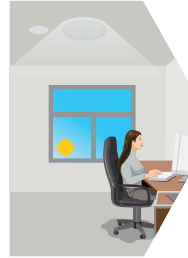

The light turns on at full or dims to maintain the lux level. The light output regulates according to the level of natural light available.

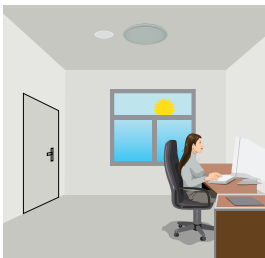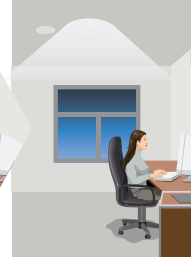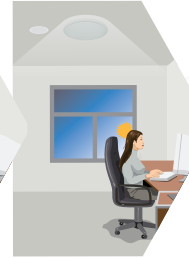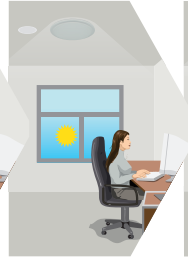

The light switches off when the ambient natural light is sufficient.

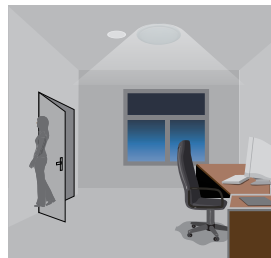

The light dims to stand-by period after hold-time and stays on selected minimum dimming level.




The light switches off completely after the stand-by period.


Note:

The Light automatically dims down and eventually turns off if the natural light lux level exceeds the daylight threshold. However, if the stand-by period is preset at " $+\infty$ ", the fixture never switches off but dim to minimum level, even the natural light is sufficient.

2 Zero-cross Relay Operation


Designed in the software, sensor switches on/off the load right at the zero-cross point, to ensure that the in-rush current is minimised, enabling the maximum lifetime of the relay.

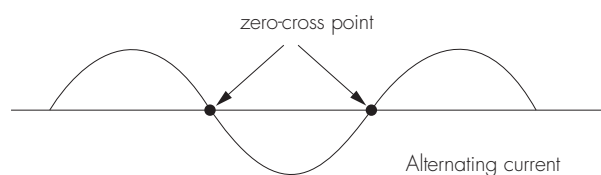

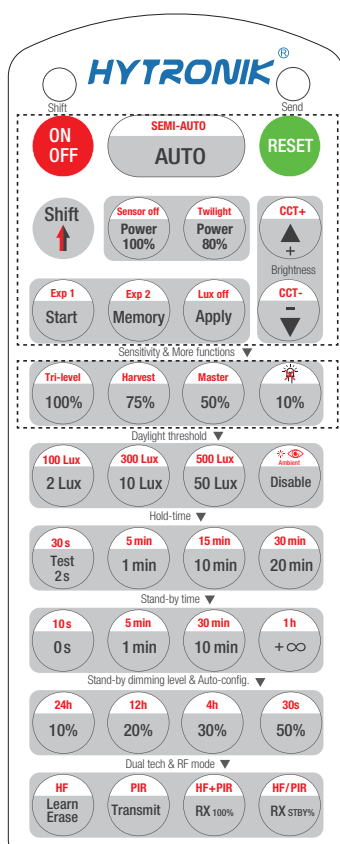

HRC-11

ON OFF	Press button "ON/OFF" to select permanent ON or permanent OFF mode. * Press button "AUTO"/ "RESET" to exit this mode. Note: After a power failure, the unit will default to AUTO mode upon power restoration
RESET	Press the "RESET" button to apply the latest DIP/rotary switch settings for models equipped with hardware switches, or to restore factory default parameters for models without hardware switches. Factory defaults: Auto mode; Detection range 100%; Hold-time 5min; Stand-by time +∞; Stand-by dimming level 10%; Daylight threshold 100 Lux; HF/PIR detection mode.
Shift ↑	Press the "Shift" button to activate the secondary function layer. The LED at the top left corner lights up to indicate mode selection. While the LED is on (20 seconds), all buttons marked in red are enabled and can be selected.
AUTO	Press button "AUTO" to initiate automatic mode. The sensor starts working and all settings remain as before the light is switched ON/OFF;
SEMI-AUTO	This key is not applicable on this product.
Power 100% 80%	Press the buttons in the "Power" zone to select 80% or 100% light output. Selecting 80% output may help optimize system efficiency during the early stage of installation, while 100% output can be applied when higher luminous performance is required over time.
Sensor off	1. Press button "Shift", the red LED on. 2. Press button "Sensor off", the function of movement detection is disabled, the function of photocell is also disabled.
Twilight	This key is not applicable on this product.
▲ ▼	Press these two buttons to adjust the light output brightness and set a new target lux level. The daylight sensor can measure ambient daylight level and ignore the LED light, so as to calculate how much artificial light is needed to maintain the target lux level.
CCT+ CCT-	This key is not applicable on this product.
Start Memory Apply	1. Press button "Start" to program. 2. Select the buttons in "Detection range", "Daylight threshold", "Hold-time", "Stand-by time", "Stand-by dimming level" to set all parameters. 3. Press button "Memory" to save all the settings programmed in the remote control. 4. Press button "Apply" to set the settings to each sensor unit(s). For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +∞, stand-by dimming level 30%, the steps should be: Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+∞", "30%", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s).
Lux off	This button is not applicable to this product. The LUX OFF function is enabled by default and cannot be disabled. During both T1 and T2 periods, the sensor continuously monitors the ambient light level: If the ambient light level exceeds the preset LUX value for 5 minutes during T1, the product will automatically switch OFF. If the ambient light level exceeds the preset LUX value for 5 minutes during T2, the product will also automatically switch OFF. When T2 is set to infinity (∞), the product will not switch OFF automatically even if the ambient light level exceeds the preset LUX value. Instead, the light will dim to the minimum level.
Exp 1 Exp 2	"Exp" refer to Expansion, these two buttons are reserved functions and pending future development.

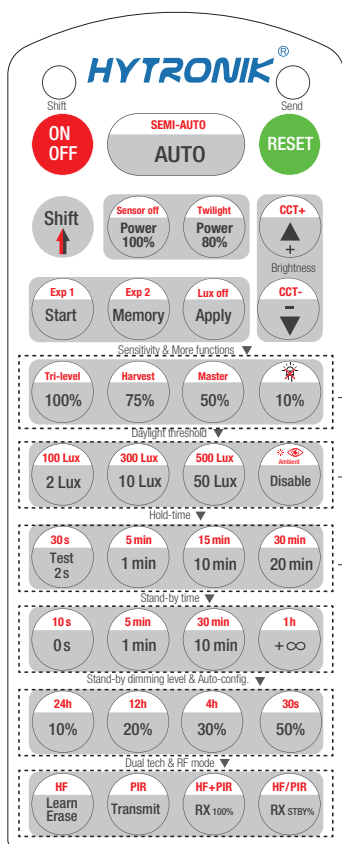

HRC-11

Sensitivity & More functions	
100% 75% 50% 10%	In AUTO /SEMI-AUTO modes, press buttons in zone "Detection range" to set detection range at 100%/75%/50%/10%.
Tri-level Harvest	This key is not applicable on this product.
Master	This key is not applicable on this product.
Daylight threshold	
2 Lux 100 Lux 10 Lux 300 Lux 50 Lux 500 Lux Disable	Press buttons in zone "Daylight threshold" to set daylight sensor at 2Lux/ 10Lux / 50Lux / 100Lux / 300Lux/500Lux / Disable. <i>Note: To set daylight sensor at 100Lux / 300Lux/500Lux , press "Shift" button first.</i>
Ambient	1. Press button "Shift", the red LED on. 2. Press button "Ambient", the surrounding lux level is sampled and set as daylight threshold / target Lux level.
Hold-time mode	
Test 2s 30s 1min 5min 10min 15min 20min 30min	In AUTO /SEMI-AUTO modes, press buttons in zone "hold-time" to set the hold-time at 2s / 30s / 1min / 5min / 10min / 15min / 20min / 30min. <i>Note: 1. To set hold-time at 30s / 5min / 15min / 30min, press "Shift" button first. 2. 2s is for testing purpose only, stand-by period and daylight sensor settings are disabled in this mode.</i> *To exit from Test mode, press button "RESET" or any button in "Hold-time".
Stand-by time mode	
0s 10s 1min 5min 10min 30min ∞ 1h	Press buttons in zone "stand-by time" to set the stand-by period at 0s / 10s / 1min / 5min / 10min / 30min / 1h / +∞. <i>Note: 1. To set stand-by-time at 10s/ 5min / 30min / 1h, press "Shift" button first. 2. "0s" means on/off control; 3. "+∞" indicates bi-level control. In this mode, the fixture turns 100% on when motion is detected and switches to the stand-by dimming level after the motion hold-time if no presence is detected. During this state, the Lux-off function is deactivated. The light will only turn on when the motion sensor is triggered if the ambient lux level is below the set daylight threshold.</i>
Stand-by dimming level & Auto-config.	
10% 20% 30% 50%	Press the button in zone "stand-by dimming level" to set the stand-by dimming level at 10% / 20% / 30% / 50%.
24h 12h 4h 30s	1.Press button "Shift" ,the red LED on. 2.Select a time period and the sensor will do light level measurement and determine/save the lowest light level (commission line) with 100% light on, so as to set the target lux level automatically. <i>Note:1.Make sure the light level measurement covers the night time. 2.The fixture will go into sensor mode after the measurement, all sensor setting remain unchanged.</i>
Dual tech & RF mode	
Learn Erase	This key is not applicable on this product.
Transmit	This key is not applicable on this product.
HF PIR HF+PIR HF/PIR	1.Press button "Shift" ,the red LED on. 2. Choose one of the four detection mode "HF only", "PIR only", "HF& PIR" or " HF/PIR".

Additional Information / Documents

1. To learn more about detailed product features/functions, please kindly refer to
<https://hytronik.com/product/him32>
2. Regarding precautions for Microwave sensor installation and operation, please kindly refer to
<https://hytronik.com/service/downloads> (Microwave Sensors Precautions for Product Installation and Operation)
3. Regarding precautions for PIR sensors installation and operation, please kindly refer to
<https://hytronik.com/service/downloads> (PIR Sensors Precautions for Product Installation and Operation)
4. Data sheet is subject to change without notice. Please always refer to the most recent release on
<https://hytronik.com/products/motion-daylight-sensors>
5. Regarding Hytronik standard guarantee policy, please kindly refer to
<https://hytronik.com/service/downloads> (Guarantee Conditions document)