Flush Mount PIR Motion Sensor



HIR27 Low-bay HIR27/R Reinforced Low-bay HIR27/W Wide range Low-bay



HYTRON





HIR27/H High-bay HIR27/UH
Ultra High-bay

Applications

Office, classroom and commercial interior spaces where DALI-2 control is required in small groups.

- Office / Commercial Lighting
- Classrooms
- Stairwells / Corridors



the light fixtures is provided via self-powered DALI communication.

Set-up of the sensor is carried out using a remote control handset with program memory allowing one-key commissioning where common settings are used for

whilst retaining the functionality expected of the latest lighting controls. Control to





Features

multiple devices.



Daylight harvest function to regulate light output for maintaining required lux level.

Store settings in the remote for easy commissioning when programming multiple sensors.

Intelligent photocell - lights and sensors only operate when needed, natural light has proirity.

Synchronisation terminal for grouping of sensors.

Black & White & Gray metal surface mount box option

 $\hfill \ensuremath{ \ensuremath{ \bigcirc } }$ Two types of blind inserts / blanking plates

>> User-friendly design for installation

High bay version available (up to 21 m in height)

5 year warranty

Subject to change without notice. Edition: 30 Sept. 2024 Ver. A2 Page 1/13

Technical Data

| Input Characteristics | |
|-----------------------|--|
| Operating voltage | 220~240VAC 50/60Hz |
| Stand-by power | <0.5W |
| DALI bus power supply | l guaranteed: 64mA l max.: 80mA U rated: 16VDC |
| Warming-up | Appr. 20s |

| Safety and EMC | |
|-----------------------|---|
| EMC standard (EMC) | EN55015, EN61000, EN61547 |
| Safety standard (LVD) | EN60669-1, EN60669-2-1, AS/NES60669-1/-2-1 |
| Certification | CB, CE , EMC, LVD, RCM ROHS compliance |

| Sensor Data | |
|-------------------------------------|---|
| Sensor Model | PIR detection |
| Detection range (Max.)* HIR27 | Installation Height : 6m Detection Range(Ø) :9m |
| Detection range (Max.)* HIR27/R | Installation Height : 6m Detection Range(∅) : 10m |
| Detection range (Max.)* HIR27/W | Installation Height : 6m Detection Range(Ø) :18m |
| Detection range (Max.)* HIR27/H | Installation height: 15m (forklift) 12m (person) Detection range (∅): 24m |
| Detection range (Max.)* HIR27/UH | Installation height: 21m Detection range (Ø): 28m |
| Detection angle | 360° |
| Sensitivity | 10% / 50% / 75% / 100% |


| Environment | |
|-------------------------|-------------------|
| Operation temperature | Ta: -20°C ~ +50°C |
| IP rating | IP20 / IP54 |
| IP rating (facial part) | IP54 |


^{*}IP54 (facial part) only for lens of standard,/R,/H,/UH


Subject to change without notice. Edition: 30 Sept. 2024 Ver. A0 Page 2 /13

Mechanical Structure



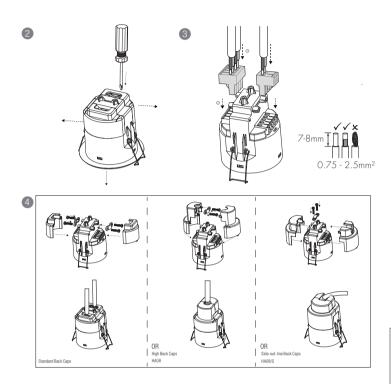


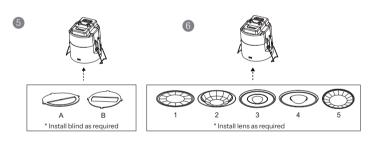

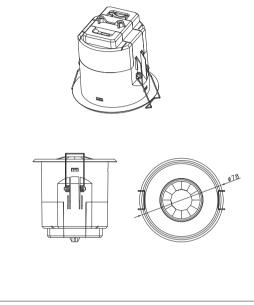

- 1. Ceiling (drill hole Ø 66~68mm).
- 2. Carefully prise off the Back Caps.
- 3. Make connections to the pluggable terminal blocks.
- 4. Secure the cables with screws for better stability. Three types of Back Caps are available (Standard, HA08, and HA08/S).
- 5. Fit detection blind (if required).
- 6. Fit desired lens, clip fascia to body (this step is not applicable for /UH).
- 7. Bend back springs and Insert into ceiling.

*The standard back cap is designed for the installation of two cables. HA08 is a high back cap, allows cables to exit upwards. HA08/S is designed for sideways cable exits.

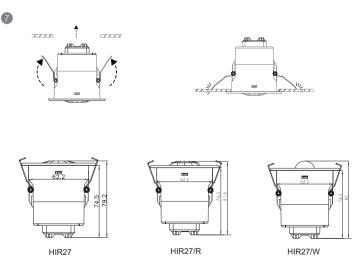






Subject to change without notice.

Edition: 30 Sept. 2024

Ver. AO F

Page 3/13


Wiring Diagram

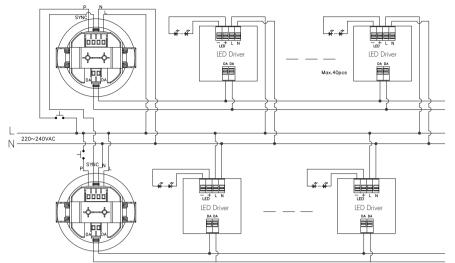

Note: Maximum sync cable length 100m

Wire Preparation



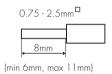


Pluggable screw terminal. It is recommended to make connections to the terminal before fitting to the sensor.


- 1. 200 metres (total) max. for $1 \, \text{mm}^2 \, \text{CSA}$ (Ta = $50 \, ^{\circ} \text{C}$)
- 2. 300 metres (total) max. for 1.5mm² CSA (Ta = 50 C)

Optional Accessories For Water-Proof

Small silicon water-proof gasket dimension(size:mm)

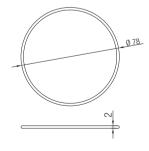

Big silicon water-proof gasket dimension(size:mm)

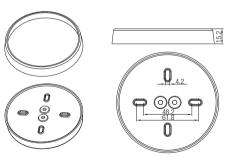

Note: The small silicon water-proof gasket is not suitable for HIR27/W and HIR27/UH The Big silicon water-proof gasket is not suitable for HIR27/W

Edition: 30 Sept. 2024 Ver. AO


1. HIR27 (Low-bay)



HIR27: Low-bay flat lens detection pattern for single person @ Ta = 20°C (Recommended ceiling mount installation height 2.5m-6m)

A: Tangential movement

h = max.6m

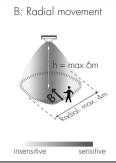

| Mount height | Tangential (A) | Radial (B) |
|--------------|---|-------------------------------|
| 2.5m | $\max 50\text{m}^2 (\varnothing = 8\text{m})$ | $\max 13m^2 (\emptyset = 4m)$ |
| 3m | $\max 64m^2 (\varnothing = 9m)$ | $\max 13m^2 (\emptyset = 4m)$ |
| 4m | $\max 38m^2 (\emptyset = 7m)$ | $\max 13m^2 (\emptyset = 4m)$ |
| 5m | $\max 38m^2 (\emptyset = 7m)$ | $\max 13m^2 (\emptyset = 4m)$ |
| 6m | $\max 38m^2 (\emptyset = 7m)$ | $\max 13m^2 (\emptyset = 4m)$ |


Optional Accessory -- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/G










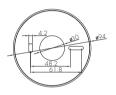

Optional Accessory --- HA08





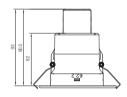





*Note: Optional Accessory HA09 & HA08 can not be uesd together.

Optional Accessory --- Blind Insert for Blocking Certain Detection Anale









Blind Option 2 --- 180° Detection

Subject to change without notice. Edition: 30 Sept. 2024 Ver. AO Page 5/13


2. HIR27/R (Reinforced Low-bay)



HIR27/R: Low-bay convex lens detection pattern for single person @ Ta = 20°C (Recommended ceiling mount installation height 2.5m-6m)

A: Tangential movement

h = max.6m

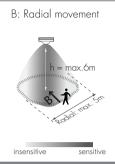

| Mount height | Tangential (A) | Radial (B) |
|--------------|-------------------------------|-------------------------------|
| 2.5m | max 79m² (Ø = 10m) | $\max 20m^2 (\emptyset = 5m)$ |
| 3m | max 79m² (Ø = 10m) | $\max 20m^2 (\emptyset = 5m)$ |
| 4m | max 64m² (Ø = 9m) | $\max 20m^2 (\emptyset = 5m)$ |
| 5m | $\max 50m^2 (\emptyset = 8m)$ | $\max 20m^2 (\emptyset = 5m)$ |
| 6m | $\max 50m^2 (\emptyset = 8m)$ | $\max 20m^2 (\emptyset = 5m)$ |


Optional Accessory -- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/C










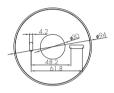


Optional Accessory --- HA08





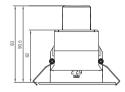



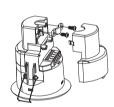

*Note: Optional Accessory HA09 & HA08 can not be uesd together.

Optional Accessory --- Blind Insert for Blocking Certain Detection Angle







Blind Option 2 --- 180° Detection

Subject to change without notice. Edition: 30 Sept. 2024 Ver. AO Page 6/13


3. HIR27/W (Wide range Low-bay)




HIR27/W: Low-bay convex lens detection pattern for single person @ $Ta = 20^{\circ}C$

(Recommended ceiling mount installation height 2.5m-6m)

A: Tangential movement

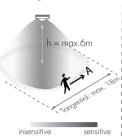

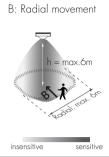


| Mount height | Tangential (A) | Radial (B) |
|--------------|---|--|
| 2.5m | max 254m²(∅ = 18m) | $\max\ 28\text{m}^2(\varnothing=6\text{m})$ |
| 3m | max 254m² (∅ = 18m) | $\max 28m^2 (\emptyset = 6m)$ |
| 4m | $\max 154 m^2 (\emptyset = 14 m)$ | $\max\ 28\text{m}^2\text{(}\varnothing=\text{6m)}$ |
| 5m | $\max 113m^2 (\emptyset = 12m)$ | $\max 28m^2 (\emptyset = 6m)$ |
| 6m | $\max 79\text{m}^2(\varnothing = 10\text{m})$ | $\max 13m^2 (\emptyset = 4m)$ |


Optional Accessory -- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/G







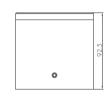


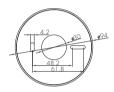

Optional Accessory --- HA08





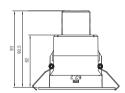






*Note: Optional Accessory HA09 & HA08 can not be uesd together.


Subject to change without notice. Edition: 30 Sept. 2024 Ver. A0 Page 7/13

3. HIR27/H (High-bay)



HIR27/H: High-bay lens detection pattern for forklift @ Ta = 20°C (Recommended ceiling mount installation height 10m-15m)

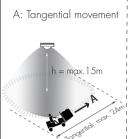

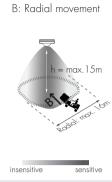

| Mount height | Tangential (A) | Radial (B) |
|--------------|---|---|
| 1 Om | $\max 380 \text{m}^2 (\varnothing = 22 \text{m})$ | max 201m² (Ø = 16m) |
| 11m | $max 452m^2 (\emptyset = 24m)$ | $max 201m^2 (\emptyset = 16m)$ |
| 12m | $\max 452 m^2 (\emptyset = 24 m)$ | $max 201 m^2 (\emptyset = 16m)$ |
| 13m | $\max 452 m^2 (\emptyset = 24 m)$ | $\max 177 \text{m}^2 (\emptyset = 15 \text{m})$ |
| 14m | $\max 452 m^2 (\emptyset = 24 m)$ | $max 133m^2 (\emptyset = 13m)$ |
| 15m | $\max 452 m^2 (\emptyset = 24 m)$ | $max 113m^2 (\emptyset = 12m)$ |




insensitive

HIR27/H: High-bay lens detection pattern for single person @ Ta = 20°C (Recommended ceiling mount installation height 2.5m-12m)

A: Tangential movement

h = max.12m

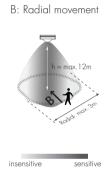

| Mount height | Tangential (A) | Radial (B) |
|--------------|---|------------------------------|
| 2.5m | $\max 50 \text{m}^2 (\emptyset = 8 \text{m})$ | $\max 7m^2 (\emptyset = 3m)$ |
| 6m | $max 104m^2 (\emptyset = 11.5m)$ | $\max 7m^2 (\emptyset = 3m)$ |
| 8m | $max 154m^2 (\emptyset = 14m)$ | $\max 7m^2 (\emptyset = 3m)$ |
| 1 Om | $max 227m^2 (\emptyset = 17m)$ | $\max 7m^2 (\emptyset = 3m)$ |
| 1 1 m | $\max 269 \text{m}^2 (\emptyset = 18.5 \text{m})$ | $\max 7m^2 (\emptyset = 3m)$ |
| 12m | $max 314m^2 (\emptyset = 20m)$ | $\max 7m^2 (\emptyset = 3m)$ |


Optional Accessory -- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/G










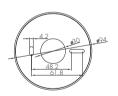

Optional Accessory --- HA08





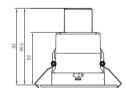






*Note: Optional Accessory HA09 & HA08 can not be uesd together.

Subject to change without notice.

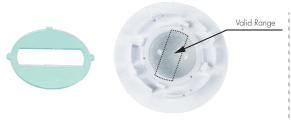






Blind Option 2 --- 180° Detection

5. HIR27/UH (Ultra High-bay)

HIR27/UH: Ultra High-bay convex lens detection pattern for single person @ Ta = 20°C (Recommended ceiling mount installation height 3m-21m)

Noted: The different humidity levels in the environment can affect the sensor detection range.

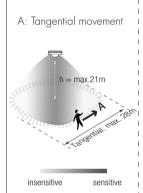



| Mount height | Tangential (A) | Radial (B) |
|--------------|--|---|
| 3m | $\max 12.5 m^2 (\emptyset = 4m)$ | $\max 12.5 \text{m}^2 (\emptyset = 4\text{m})$ |
| 6m | $\max 50\text{m}^2(\varnothing=8\text{m})$ | $\max 28m^2 (\emptyset = 6m)$ |
| 9m | $\max 113m^2 (\emptyset = 12m)$ | $\max 50 \text{m}^2 (\varnothing = 8 \text{m})$ |
| 12m | $max201m^{2}(\emptyset = 16m)$ | $max79m^2(\varnothing = 10m)$ |
| 15m | $max314m^{2}(\emptyset = 20m)$ | $\max 113m^2 (\emptyset = 12m)$ |
| 18m | $\max 452 m^2 (\varnothing = 24 m)$ | $\max 113m^2 (\emptyset = 12m)$ |
| 21m | max615m² (∅ = 28m) | $max113m^{2}(\emptyset = 12m)$ |


Optional Accessory --- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/G










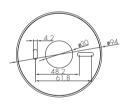

Optional Accessory --- HA08





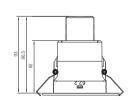





*Note: Optional Accessory HA09 & HA08 can not be uesd together.

Ver. AO Page 9/13 Edition: 30 Sept. 2024

Functions and Features

1 Daylight Harvest



Light will not switch on when natural light is sufficient, even there is motion detected.



The light switches on automatically with presence when natural light is insufficient.



The light turns on at full or dims to maintain the lux level. The light output regulates accroding to the level of natural light available.



The light switches off when the ambient natural light is sufficient.



The light dims to stand-by period after hold-time and stays on selected minimum dimming level.



The light switches off completely after the stand-by period.

2 Manual Override

With the help of push-switch, this sensor can be over-ridden by the end-user to manually switch on/off the light, or adjust the target lux level by push-switch, which makes the product more user-friendly and offers more options to fit some extra-ordinary demands:

- * Short Push (<1s): on/off function;
 - On → Off: the light turns off immediately and cannot be triggered ON by motion until the expiration of pre-set hold-time. After this period, the sensor goes back to normal sensor mode.
- Off \rightarrow On: the light turns on and goes to sensor mode, no matter if ambient Lux level exceeds the daylight threshold or not.
- * Long Push (>1s): adjust the target lux level by turning the light up or down. Both the adjustment on remote control and push switch can overwrite each other. The last adjustment remains in memory.

Note: if end-user do not want this manual override function, just leave the "push" terminal unconnected to any wire.

3 Semi-auto Mode (Absence Detection)

Selecting this mode will activate the following logic:

Manual on - The lights will not switch on until they have manually been switched on at the wall switch. The occupancy sensor is inactive whilst the lights are off.


Auto off - When the lights are on, the sensor becomes active and monitors the space for activity. Once the area is vacated (absence setection), the sensor will automatically switch off the lights if the last person out forgets to switch off the light manually

Note: The wall switch can be assigned to function 2 or 3, but not both. The default function is manual override.

4 Detection Synchronisation Function

By connecting the "SYNC" terminals in parallel (see wiring diagram), no matter which sensor detects motion, all HIR27 in the group will turn on the lights when surrounding natural light is below the daylight threshold. The detection area could be widely enlarged in this way.


Subject to change without notice. Edition: 30 Sept. 2024

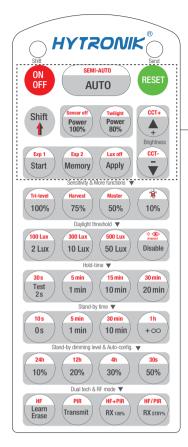

HRC-11

| ON OFF | Press button "ON/OFF" to select permanent ON or permanent OFF mode. * Press button "AUTO"/ "RESET" to exit this mode. |
|--------------------------|--|
| RESET | Press button "RESET", all settings go back to default. The default settings are: Auton mode; Hold-time 5min; Daylight sensor 100 lux; Stand-by time 10min; Stand-by dimming level: 20%; Lux off activated; |
| Shift | Press button "Shift", the LED on the top left corner is on to indicate mode selection. All values / settings in RED are valid for 20 seconds. |
| AUT0 | Press button "AUTO" to initiate automatic mode. The sensor starts working and all settings remain as before the light is switched ON/OFF; |
| SEMI-AUTO | 1. Press button "Shift" ,the red LED on. 2. Press button "SEMI-AUTO" to initiate Semi-auto mode. The sensor is only activated with the manual press of push switch. To exit this mode, simply press button "AUTO" / "RESET". For Sensor LED indicator references: Remains on 2s, initiate "Semi-auto" mode from "Auto" mode. |
| Power 100% 80% | Press buttons in zone "Power out" to select the light output at 80% (at initial 10,000 hours) or 100%. |
| Sensor off | This key is not appliable on this product. |
| Twilight | Press button "Shift", the red LED on. Press button "Twilight", the function of movement detection is disabled, but the function of photocell is still working, and the product becomes a pure dusk/ dawn daylight sensor. To exit from "Twilight" mode, press button "AUTO"/"SEMI-AUTO"/"RESET". |
| (*) (*) | Press these two buttons to adjust the light output brightness and set a new target lux level. The daylight sensor can measure ambient daylight level and ignore the LED light, so as to calculate how much artificial light is needed to maintain the target lux level. |
| CCT+ CCT- | This key is not appliable on this product. |
| Start Memory Apply | 1. Press button "Start" to program. 2. Select the buttons in "Detection range", "Daylight threshold", "Hold-time", "Stand-by time", "Stand-by dimming level" to set all parameters. 3. Press button "Memory" to save all the settings programmed in the remote control. 4. Press button "Apply" to set the settings to each sensor unit(s). For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +\infty, stand-by dimming level 30%, the steps should be: Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+\infty", "30%", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s). |
| Lux off | The "Lux off" function is activated as default. When the ambient lux level exceeds the target level continuously for more than 5 minutes, the lights will be turned off. In AUTO /SEMI-AUTO/Twilight modes, to disable "Lux off": 1. Press "Shift" button first, the red LED on. 2. Press "Lux off" button, the "Lux Off" function will be deactivated. The lights will not turn off even when the ambient lux level exceeds the target lux level but will dim down the brightness to the stand-by time level. For Sensor LED indicator references: 1. Fast flash 1s, "Lux off" function activated. 2. Remains on 2s, "Lux off" function deactivated. |
| Exp 1 Exp 2 | "Exp" refer to Expansion, these two buttons are reserved functions and pending future development. |
| | |

Subject to change without notice. Edition: 30 Sept. 2024 Ver. AO Page 11/13

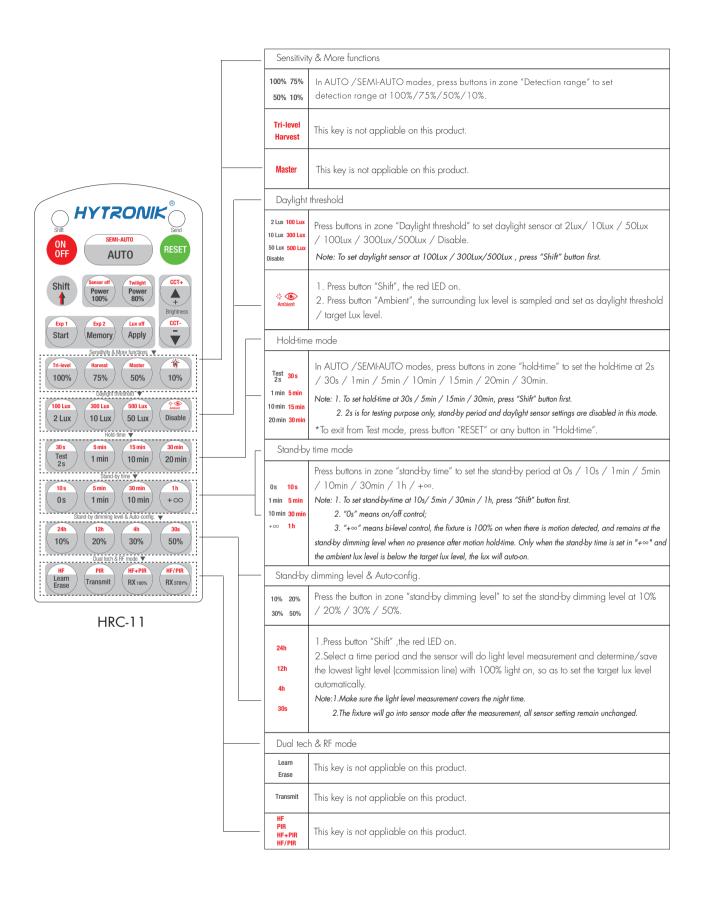

Subject to change without notice. Edition: 30 Sept. 2024 Ver. A0 Page 12/13

Additional Information / Documents

| 1. | Regarding precautions for PIR sensor installation and operation, please kindly refer to | |
|----|--|-----------|
| | www.hytronik.com/download ->knowledge ->PIR Sensors - Precautions for Product Installation and G | Operation |

2. Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download ->knowledge ->Hytronik Standard Guarantee Policy

Subject to change without notice. Edition: 30 Sept. 2024 Ver. AO Page 13/13