#### Detached Emergency Driver with \*Bluetooth\* 5.0 SIG Mesh

#### HBEM02

Self-Test

#### **Product Description**

HBEM02 is an emergency inverter with RJ12 connection for optional sensor heads SAM20, SAM21, SAM22, SAM23, HIR05, HIR05/FM, HIR07, HIR11 series, HIR12, HIR63 series. When the sensor head is not attached to, HBEM02 alone is a normal emergency inverter with self-test function. With gateway HBGW01 ready, user can generate emergency testing report through our **Manimesh** "app. HBEM02 can also conduct monthly or annually testing automatically and user can get email notification as soon as fault is detected. Meanwhile, simple device setup and commissioning can be done via **Manimesh** "app.





#### App Features

Quick setup mode & advanced setup mode

Web app/platform for project deployment & data analysis

Koolmesh Pro app on iPad for on-site configuration

🗐 Floorplan feature to simplify project planning

Emergency report generation and diagnosis

49 One-key device replacement

Device social relations check

Staircase function (primary & secondary)

Remote control via gateway support HBGW01

Grouping luminaires via mesh network

Tri-level control

Daylight harvest

Circadian rhythm (Human centric lighting)

Push switch configuration

Detailed motion sensor settings

Schedule

Astro timer (sunrise and sunset)

Power-on status (memory against power loss)

Offline commissioning

Bulk commissioning (copy and paste settings)

Different permission levels via authority management

Network sharing via QR code or keycode

(a) Interoperability with Hytronik Bluetooth product portfolio

Compatible with EnOcean BLE switches

Internet-of-Things (IoT) featured

Device firmware update over-the-air (OTA)

Continuous development in progress...

#### Hardware Features

Over-temperature Protection

Short-circuit Protection

TOVerload Protection

5-year warranty, designed for long lifetime up to 50,000 hours

#### **Emergency Features**

Multi emergency wattage: 2W/3W/4W

Emergency working mode:

- Normal emergency mode

- Rest mode

- Inhibit mode

- Extended emergency mode

Monthly/Annually Automatic Testing with report generation


Battery status check via Koolmesh app

Matter Automatic email notification when fault is detected

Retrievable usage data and report history

Edition: 07 Jun. 2024

### Emergency Power Selection

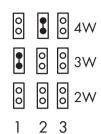

#### **Technical Specifications**

Bluetooth Transceiver	
Operation frequency	2.4 GHz - 2.483 GHz
Transmission power	4 dBm
Range (Typical indoor)	10~30m
Protocol	<b>₿Bluetooth</b> <sup>®</sup> 5.0 SIG Mesh














Fully support EnOcean self-powered switch module PTM215B (HBES01/W & HBES01/B)


	HBEM02	
Mains voltage	220~240VAC 50/60Hz	
Mains current	Max. 25mA	
Max. emergency output power	4W	
Output voltage(U-out Max.)	60V	
Power factor	>0.7	
Operation temperature	0~+50°C	
Storage temperature	-10~+35°C	
Load LED voltage	24 - 50V	
Battery pack	BPC83, BPC84	
Battery Type (LiFePO4) / Discharge current / Max. load / Discharge hour	BPC83/BPC84: 6.4V, 3.4AH / 0.45A, 2W@24 - 50V / 180min BPC83/BPC84: 6.4V, 3.4AH / 0.65A, 3VV@24 - 50V / 180min BPC83/BPC84: 6.4V, 3.4AH / 0.85A, 4VV@24 - 50V / 180min	
Battery charging	0 - 500mA	
Charge period	24h	
Max. case temp.	70°C	
Abnormal protection	Output short-circuit protection, Overload Protection, Open-circuit Protection	
	Short circuit protection	
Battery abnormal protection	Reverse connection protection	
	Deep discharge protection	
EMC standard	EN55015, EN61547, EN61000-3-2, EN61000-3-3, EN300328, EN301489-12	
Safety standard	EN61347-1, EN62493, EN61347-2-7, EN62034, IEC62133	
Certifications	CE, RCM, UKCA, ROHS	
IP grade	IP2O	

#### Mechanical Structure & Dimensions

#### HBEM02

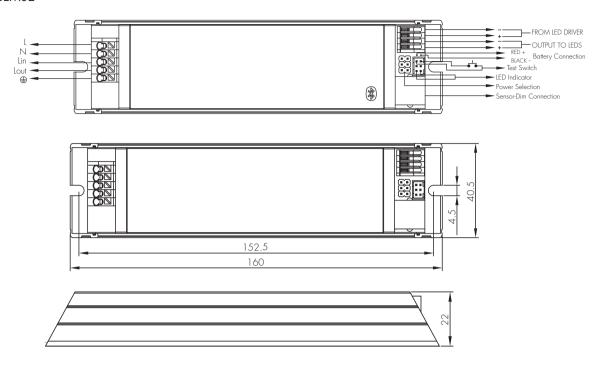


#### Wire Preparation

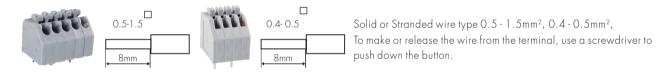


#### Wiring Diagram

#### With sensor head

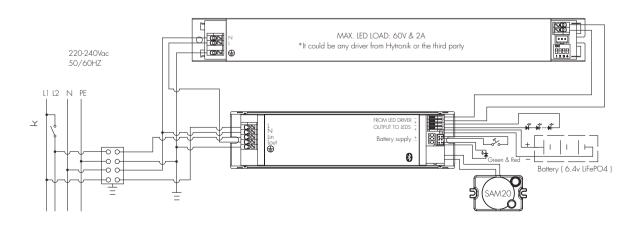

Subject to change without notice. Edition: 07 Jun. 2024

#### Without sensor head

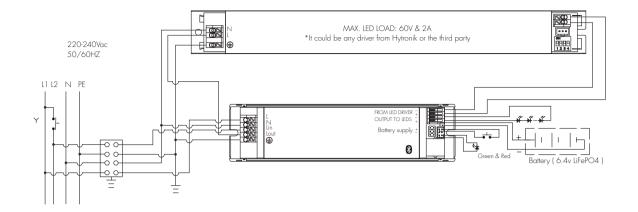

#### Loading and In-rush Current


Model	HBEM02	
In-rush Current (Imax.)	6A	
Pulse Time	120 µs	


#### Circuit Breaker Information

Automatic circuit breaker type	BIOA	B13A	B16A	B20A
НВЕМО2	80	125	150	180

Calculation uses typical values from ABB series S200 as a reference. E.g. Maximum amount = 16/(Pn/230). We recommend to use no more than 60% of the data as the actual max. number of drivers in real application. Actual values may differ due to used circuit breaker types and installation environment.

#### Performance Characteristics

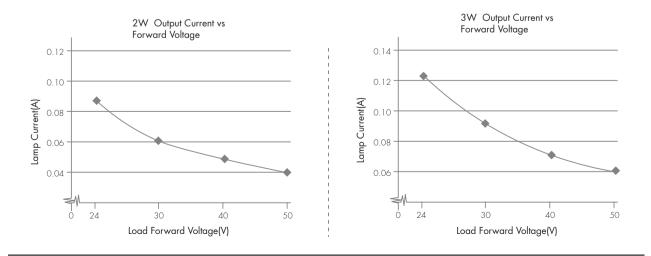

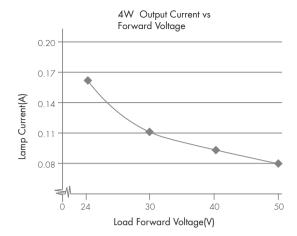

#### Normal Mode

It is the mode in which mains supply is available, with the battery charged or charging. In this mode, HBEMO2 can be controlled by app to set emergency parameters.

#### **Emergency Mode**

It is the mode in which mains supply has failed and whilst the control gear is powered by the battery until deep discharge point. In this mode, HBEMO2 is unable to be controlled by motion sensor, Push switch and app. However, some emergency parameters can still be configured via the app, such as time scheduled for self-test, duration for extended emergency mode etc.

#### Rest Mode

It is the mode in which the luminaire is intentionally off whilst the control gear is powered by the battery. To enter this mode, the prerequisite is that there is no mains supply. In this mode, the luminaire will be turned off automatically and HBEM02 is powered by the battery. If the luminaire is forced to turn on in this mode, HBEM02 will then be adjusted to emergency mode. When mains supply is recovered, HBEM02 will return to normal mode.

#### Inhibit Mode

It is the mode in which HBEM02 is powered from the mains but prevented from going into emergency mode in the event of mains failure. Please enter this mode only in special applications whereby emergency function is not needed, such as when electrician needs to cut off power supply when doing examination and maintenance work for HBEM02.

#### Extended Emergency Mode

It is the mode in which the control gear continues to operate the lamp in the same way as in emergency mode for the programmed prolong time after the restoration of the mains supply. When this mode is enabled, HBEMO2 will remain in emergency mode even when mains supply is recovered. In this mode, the user has to set the time extended for emergency mode; when the time extended elapses, HBEMO2 will then return to normal mode.

#### Self test (Monthly)

HBEM02 carries out routine test on emergency lighting based on pre-programmed time via the app or after receiving manual commands from the app. During the self test process, tests for load connections (such as open circuit, short-circuit) and battery connections (such as open circuit, short-circuit, polarity reversal etc.) will be carried out.

#### Self test (Annually)

The test is carried out mainly to check the battery level. The user has to make sure that the battery for HBEM02 is fully charged before HBEM02 carries out annual test or annual test. Also, the battery lifetime statistics will be analysed and displayed on a chart basis.

Subject to change without notice. Edition: 07 Jun. 2024 Ver. AO Page 5/11

#### **LED Diagnostics**

Indicator Colour	Status	Meaning	
GREEN SOLID	Device OK	All OK, AC power is present. Battery is connected & charging	
GREEN FAST FLASH (0.1s ON, 0.1s OFF)	Monthly test/Functionality test	AC power is present. Monthly test in progress	
GREEN VERY SLOW FLASH	Annual test/Duration test	Annual test are being carried out	
RED SOLID	Emergency LED fault	Emergency LED is open circuit, short circuit or has otherwise failed in some way,. Fault can indicate the live status or the result of a tes	
RED SLOW FLASH (1s ON, 1s OFF)	Battery fault	Battery failure (Battery failed the duration or functional test, battery appears to be defective, battery has incorrect voltage).	
RED / GREEN OFF	No power available	AC power is lost, unit in emergency mode	

<sup>\*</sup>If you want to see the diagnostic report, please go to the APP or web platform to see the full report and analysis

Note: Before powering on, please plug in the sensor head and then plug in the battery, otherwise the sensor is disabled. Remedy: Only after the APP is reset and re-connected to the network can the sensor head be re-identified.

#### **Battery Pack Options**

Package code	Picture	Spec.	Size (mm)	Duration	Recharge Time	Accessories
BPC83	100 Mario Balant College Colle	LiFePO4, 6.4V, 3.4Ah	110x55x27	>3h @3W >3h @2W	24h	Battery bracket, LED indicator, Test switch
BPC84		LiFePO4, 6.4V, 3.4Ah	170x30x27	>3h @2VV >3h @4VV	24h	Battery bracket, LED indicator, Test switch

Please kindly note that the optimal storage temperature should be  $22^{\circ}\text{C}$  to  $28^{\circ}\text{C}$ .

The relative humidity (RH) for battery storage should be 45% to 85%.

Keep the battery wires unconnected if the battery is intended to be stored for more than 3 months.

The maximum battery cycles under 55°C should not exceed 80 times.

Please kindly charge battery for 24 hours before using.

Do not short-circuit the battery pack.

In case of a short circuit the battery protection opens the connection to the driver and the output is therefore free of voltage. At this time, it will falsely report battery failure. The output will be reactivated again when the short circuit is removed.

Subject to change without notice. Edition: 07 Jun. 2024 Ver. AO Page 6/11


#### Technical Specifications for Sensor Heads

PIR Sensor Properties		HF Sensor Properties		
Sensor principle PIR detection		Sensor principle High Frequency (microwave)		
Operating voltage	5VDC	Operating voltage	5VDC	
	HIRO5 & HIRO5/FM & HIRO5/AA & & HIRO7	Operation frequency	5.8GHz +/- 75MHz	
	Max installation height: 3m	Transmission power	<0.2mW	
	Max detection range: 6m (diameter) HIR11 Max installation height: 15m (forklift)		SAM20 & SAM21 & SAM22 & SAM22/AA Max installation height: 3m	
Detection range *	12m (single person)	Detection range *	Max detection range: 12m (diameter)	
	Max detection range: 24m (diameter)		SAM23   Max installation height: 15m (forklift)	
	HIR 1 2 Max installation height: 15m (forklift) 12m (single person)		12m (single person) Max detection range: 20m (diameter)	
Max detection range: 18m * 6m (L * W)				
	HIR63 Max installation height: 3m			
	Max detection range: 12m (diameter)			
	HIR63/R Max installation height: 8m			
	Max detection range: 10m (diameter)			

<sup>\*</sup> The detection range is heavily influenced by sensor placement (angle) and different walking paces. It may be reduced under certain conditions.

#### PIR & microwave sensor heads


The range of PIR and microwave sensor heads below offers powerful number of Plug'n'Play feature options to expand the flexibility of luminaires design. This approach to luminaire design reduces space requirements and component costs whilst simplifying production.

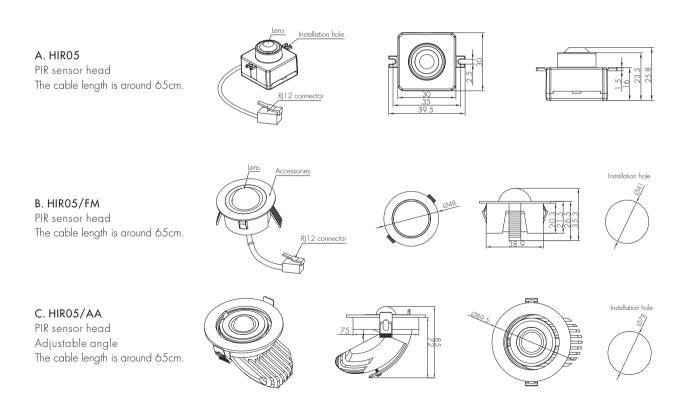



Subject to change without notice. Edition: 07 Jun. 2024 Ver. AO Page 7/11

#### D. HIRO7

PIR sensor head Photocell Advance™ The cable length is around 30cm.

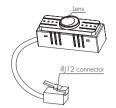


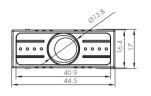

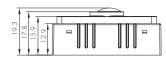


#### E. HIR11/S

PIR sensor head Surface mounting For highbay application IP65 (facia / lens part) The cable length is around 65cm.

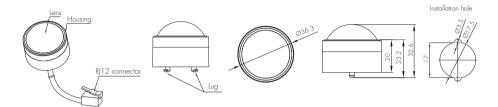


#### F. HIR11/F

PIR sensor head Flush mounting For highbay application IP65 (facia / lens part) The cable length is around 65cm.

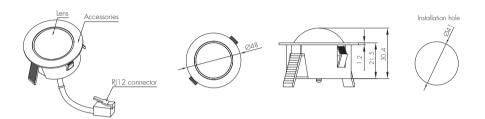


#### G. HIR11/C

PIR sensor head Screw to the luminaire by conduit For highbay application IP65 (facia / lens part) The cable length is around 65cm.

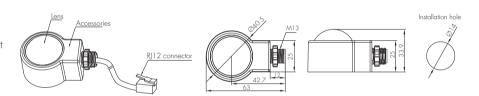


#### H. HIR12


PIR sensor head For highbay application IP65 (facia / lens part) The cable length is around 65cm.

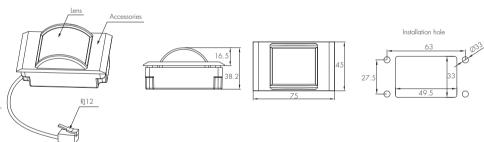

Edition: 07 Jun. 2024



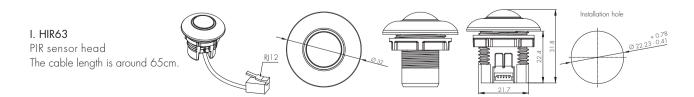


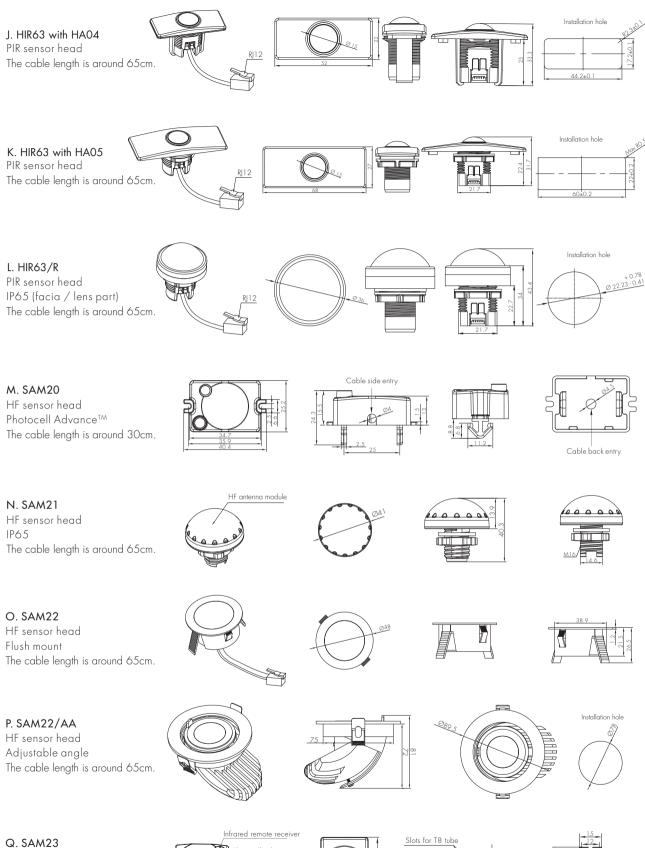


HF sensor head Photocell  $advance^{TM}$ For highbay application The cable length is around 30cm.





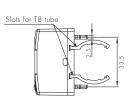


Edition: 07 Jun. 2024

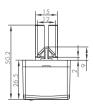


#### **Detection Pattern**

#### SAM23

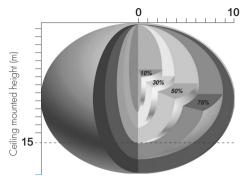


Ceiling mounted detection pattern (m)

#### SAM20 & SAM21 & SAM22 & SAM22/AA

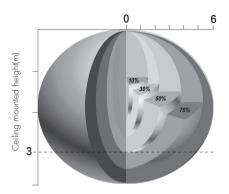


Ceiling mounted detection pattern (m)


#### HIRO5 & HIRO5/FM & HIRO5/AA & HIRO7

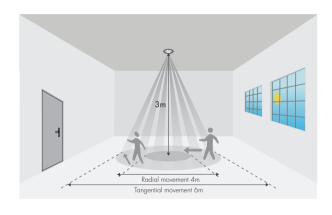


HIR12

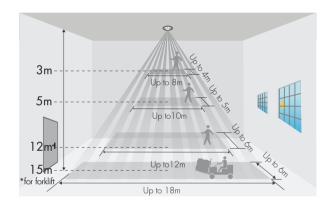

#### HIR63

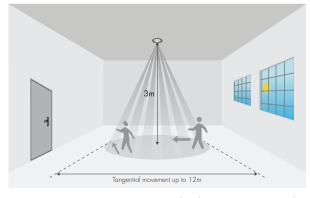

HIR63/R

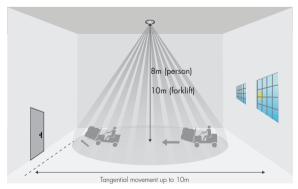

\*The detection patterns are based upon 5km/h movement speed.


Subject to change without notice. Edition: 07 Jun. 2024 Ver. AO Page 10/11

#### HIR11 Series (High-bay)



# <u>HIR11 series</u>: High-bay lens detection pattern for <u>forklift</u> @ Ta = 20°C (Recommended installation height <u>10m-15m</u>)




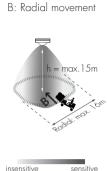


	Mount height	Tangential (A)	Radial (B)
	1 Om	max 380m² (∅ = 22m)	$\max 201 m^2 (\emptyset = 16m)$
	1 l m	$\max 452 m^2 (\emptyset = 24 m)$	$max 201m^2 (\emptyset = 16m)$
	12m	$\max 452 m^2 (\emptyset = 24 m)$	$\max 201 m^2 (\emptyset = 16m)$
	13m	$\max 452 m^2 (\emptyset = 24 m)$	$\max 177 m^2 (\emptyset = 15 m)$
	14m	$\max 452 m^2 (\emptyset = 24 m)$	$\max 133 \text{m}^2 (\varnothing = 13 \text{m})$
	1 <i>5</i> m	$\max 452 m^2 (\emptyset = 24 m)$	$\max 113m^2 (\emptyset = 12m)$



## HIR11 series: High-bay lens detection pattern for single person @ Ta = 20°C (Recommended installation height 2.5m-12m)

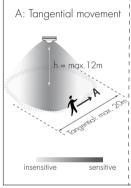

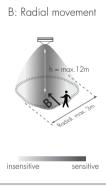

Mount height	Tangential (A)	Radial (B)
2.5m	$\max 50\text{m}^2 (\varnothing = 8\text{m})$	$\max 7m^2 (\emptyset = 3m)$
6m	$\max 104m^2 (\emptyset = 11.5m)$	$\max 7m^2 (\emptyset = 3m)$
8m	$\max 154 m^2 (\emptyset = 14 m)$	$\max 7m^2 (\emptyset = 3m)$
1 Om	$\max 227m^2 (\emptyset = 17m)$	$\max 7m^2 (\emptyset = 3m)$
11m	$\max 269 \text{m}^2 (\emptyset = 18.5 \text{m})$	$\max 7m^2 (\emptyset = 3m)$
12m	$max 314m^2 (\emptyset = 20m)$	$\max 7m^2 (\emptyset = 3m)$

### Additional Information / Documents

- 1. Regarding precautions for Bluetooth product installation and operation, please kindly refer to www.hytronik.com/download/knowledge ->Bluetooth Products Precautions for Product Installation and Operation
- 2. Regarding precautions and usage for LiFePO4 battery, please kindly refer to www.hytronik.com/download/knowledge ->LiFePO4 Battery Precautions and Usage
- 3. Data sheet is subject to change without notice. Please always refer to the most recent release on www.hytronik.com/products/bluetooth technology ->Bluetooth Emergency Driver/Inverter
- 4. Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download/knowledge ->Hytronik Standard Guarantee Policy