Flush Mount Occupancy Motion Sensor

HMW28DCVFC/PRO

On/Off Control & Low-bay



Product Description

HMW28DCVFC/PRO is Microwave standalone motion sensor integrated with Hytronik True occupancy detection technology, On/Off control with one relay channel output, which is NO (normally open contact). The Hytronik True occupancy detection technology works to detect human breathing rather than the mirror movements. No matter if the person sit/stand statically or turns their back to the sensor. The sensor accurately recognizes occupancy and keeps the lights on continuously, making it highly suitable for stable and peaceful environments such as offices and hotels, though not recommended for industrial settings.



Features

- Store settings in the remote for easy commissioning when programming multiple sensors
 - Intelligent photodiode lights and sensors only operate when needed, natural light has proirity
 - ____ Max withstandable in-rush current: 120A@160µs
 - VFC: Volt-free Contact/Dry Contact ON/OFF relay switch
 - 24VDC@5A
 - 250VAC@5A
 - Black & White & Gray metal surface mount box option
 - User-friendly design for installation
 -) 5 Year warranty

Technical Data

Input Characteristics	
Input voltage	12~48 DC
Stand-by power	30mA
Max withstandable in-rush current	120A@160µs
VFC: Volt-free Contact /Dry Contact	– 24VDC@5A – 250VAC@5A


Sensor Data	
Sensor Model	Occupancy Motion detection
Detection range (Max.)*	Installation Height : 3m Detection Range(Ø) : 10m
Detection angle	360°

* For more details of detection range, please refer to "detection pattern" section.


Safety and EMC	
EMC standard (EMC)	EN61547, EN55015, EN61000-3/2/-3-3
Safety standard (LVD)	EN60669-1, EN60669-2-1
RED	EN300 400, EN301 489-1 /-3 /-17 EN50663, EN30328
Certification	UKCA, CE, RCM

Environment	
Operation temperature	Ta: -20°C ~ +50°C
Storage temperature	-40°C ~ +70°C
IP rating	IP20
Relative humidity	10 ~ 90%

Subject to change without notice.

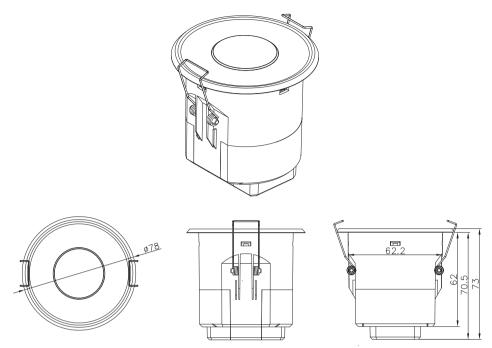


Wiring Diagram

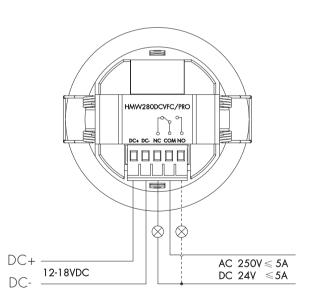

Wire Preparation





Pluggable screw terminal. It is recommended to make connections to the terminal before fitting to the sensor.

Subject to change without notice.

Sensor Installation and Commissioning Guidelines

A. Installation Preparation

- 1. Make sure the room is empty with no moving people or machinery when first powered up for 1 minute.
- 2. There is a 20-second warm-up time for the sensor. Please do the commissioning after warm-up.
- 3. When the sensor is powered off, repeat the initial steps once it's re-powered

B. Sensor Placement

1. The distance between sensors should be at least 3 meters.

2. Sensors should not directly face sources of microwave interference, such as other microwave sensors, microwave ovens, or wireless routers. Maintain a distance of at least 3 meters.

3. The installation environment should avoid object vibrations, strong airflows, curtain movements, water flow in pipes, window glass vibrations, and wind-induced movements of metal roofs. Aim for a stable environment with minimal variables.

4. The sensor is highly sensitive and suitable for stable and quiet environments like offices and hotels, but not for industrial settings.


C. Sensor Operation

1. Movements within 0.3 meters of the sensor, such as waving an arm, might not trigger the sensor, as it will identify and filter out such large movements.

2. In test mode, a red LED will flash when the sensor is triggered. There are no visual indications in normal mode.


3. If the sensor is too sensitive, use the HRC-12 remote controller to lower the sensitivity.

- 4. Avoid accidentally entering semi-auto mode.
- 5. Pay attention to the daylight sensor threshold value, which needs to be adjusted according to the installation environment.

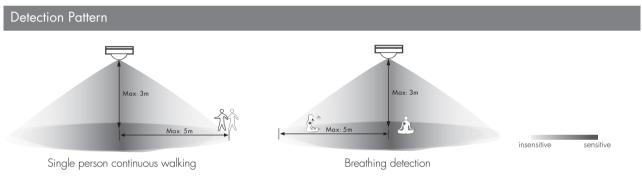


When it's in breathing & true occupancy detection mode and in sitting situation, facing to sensor directly will have a better detection range than 90 degrees side facing to


Optional Accessory --- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/C

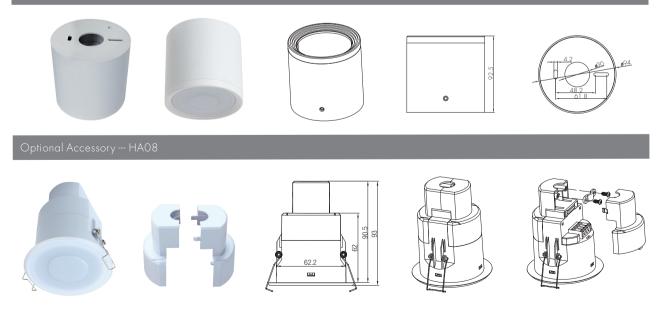

*Note: Optional Accessory HA09 & HA08 can not be uesd together.

Subject to change without notice.

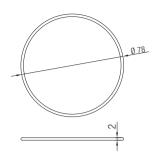

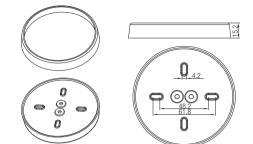

Small silicon water-proof gasket dimension(size:mm)



Functions and Features

1 On/ off Control

This sensor is a motion switch, which turns on the light upon detection of motion or breathing, and turns off after a pre-selected hold-time when there is no movement or breathing. A daylight sensor is also built in to prevent the light from switching on when there is sufficient natural light.



2 Lux Off Function

The built-in photodiode will also automatically turn off the light when the ambient natural light exceeds the programmed lux level for more than 5min, regardless of whether motion is detected or not.



With sufficient natural light, the light does not switch on when occupancy is detected.



With insufficient natural light, the sensor switches on the light automatically when occupancy is detected.



The sensor switches off the light when natural light is sufficient, even with occupancy.

Settings (Remote Control HRC-12)



Permanent ON/OFF function

Press button "ON/OFF" to select permanent ON or permanent OFF mode. * Press button "AUTO", "RESET" or "Ambient" to quit this mode. The mode will change to AUTO Mode after power failure.



Reset Settings

Press button "RESET", all settings go back to default values as below: Detection range: 100%; Hold-time: 5min; Lux disabled



Sensor mode

Press "Auto Mode" button, the sensor starts to function and all settings remain the same as the latest status before the light is switched on/off.



SEMI-AUTO mode

This key is not appliable on this product.

Detection range

Press buttons in zone "HF sensor Detection range" to set detection range at 100% / 75% / 50% / 10%.

Daylight threshold

Press buttons in zone " Daylight threshold" to set daylight sensor at 2Lux/10Lux/50Lux/100Lux/300Lux/500Lux/Disable.

Ambient daylight threshold

Press button "Ambient", the surrounding lux level is sampled and set as the new daylight threshold.

Hold-time

Press buttons in zone "hold-time" to set the hold-time at 5sec / 1min / 5min / 10min / 15min / 30min / 60min. Note: 1. 5sec is test mode.

2. Press button 30min / 60min, the actual setting is 25min.

Additional Information / Documents

- Regarding precautions for PIR sensor installation and operation, please kindly refer to www.hytronik.com/download ->knowledge ->Microwave Sensors - Precautions for Product Installation and Operation
- 2. Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download ->knowledge ->Hytronik Standard Guarantee Policy



HRC-12