# **Installation and Instruction Manual**



## **FLUSH MOUNT PIR MOTION SENSOR**

7-8mm I

On/off relay control

## 1. Technical Specifications

Mains voltage	220~240VAC 50/60Hz
Stand-by power	<0.3W
Load ratings:	
Capacitive	400VA
Resistive	800W
Warming-up	20s
Sensor principle	PIR detection
Detection range (Max.)*	Installation Height: 6m
HIR28/R	Detection Range(Ø):10m
Detection angle	360°
Operation temperature	Ta: -20°C ~ +50°C
IP rating	IP20 / IP54

### 3. Functions

#### 3.1 On/ off Control

This sensor is a motion switch, which turns on the light upon detection of motion, and turns off after a pre-selected hold-time and stand-by time when there is no movement, A daylight sensor is also built in to prevent the light from switching on when there is sufficient natural light,

#### 3.2 Lux Off Function

The built-in daylight sensor can measure ambient natural light and switch off the fixture automatically whenever artificial light is not required (natural light lux level exceeds daylight threshold).

#### 3.3 Manual Override

With the help of push-switch, this sensor can be over-ridden by the end-user to manually switch on/off the light, which makes the product more user-friendly and offers more options to fit some extra-ordinary

- \* Short Push (<1s): on/off function:
- On -> Off: the light turns off immediately and cannot be triggered ON by motion until the expiration of pre-set hold-time. After this period, the sensor goes back to normal sensor mode.
- Off On: the light turns on and goes to sensor mode, no matter if ambient Lux level exceeds the daylight threshold or not.

Note: if end-user do not want this manual override function, just leave the "push" terminal unconnected to any wire.


## 3.4 Semi-auto Mode (Absence Detection)

It is easy to forget to switch off the light, in office, corridor, even at home. And in many other cases, people do not want to have a sensor to switch on the light automatically, for example, when people just quickly pass-by, there is no need to have the light on. The solution is to apply this "absence detector": motion sensor is employed, but only activated on the manual press of the push-switch, the light keeps being ON in the presence, and switches off in the long absence

Note: end-user can choose either function 3.3 or function 3.4 for application. Default function is manual override

### 3.5 Zero-cross Relay Operation

Designed in the software, sensor switches on/off the load right at the zero-cross point, to ensure that the in-rush current is minimised, enabling the maximum lifetime of the relay.

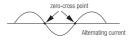

## 4. Wiring Diagram

Wire Preparation




WWW.HYTRONIK.COM





Pluggable screw terminal. It is recommended to make connections to the terminal before fitting to the sensor.


### 2. Installation


Mechanical Structure & Dimensions

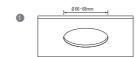

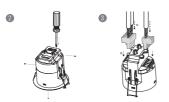

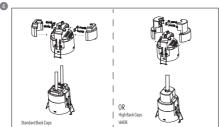

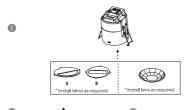

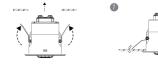








- 1. Ceiling (drill hole Ø 66~68mm).
- 2. Carefully prise off the Back Caps
- 3. Make connections to the pluggable terminal blocks.
- 4. Secure the cables with screws for better stability (provide high back caps HA08 option) .
- 5. Fit detection blind (if required) and desired lens.
- 6. Fit desired lens, clin fascia to hody 7. Bend back springs and Insert into ceiling.
- HYTRONIK

## 5. Wiring Diagram

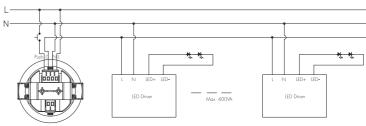

-This product should be installed by a qualified electrician.

# 6. Detection Pattern & Optional Accessories

#### HIR28/R (Reinforced Low-bay) HIR28/R: Low-bay convex lens detection pattern for single person @ $Ta = 20^{\circ}C$ (Recommended ceiling mount installation height 2.5m-6m) B: Radial movement Tangential (A) A: Tangential movement Mount height Radial (B) $\max 79m^2 (\emptyset = 10m)$ $\max 20m^2 (\emptyset = 5m)$ 2.5m $\max 79m^2 (\emptyset = 10m)$ $\max 20m^2 (\emptyset = 5m)$ 3m $\max 64m^2 (\emptyset = 9m)$ max $20m^2 (\emptyset = 5m)$ 4m $\max 50m^2 (\emptyset = 8m)$ $\max 20m^2 (\emptyset = 5m)$ 5m $\max 50m^2 (\emptyset = 8m)$ $\max 20m^2 (\emptyset = 5m)$ 6m









\*Note: Optional Accessory HA09 & HA08 can not be uesd together.

# Optional Accessory --- Ceiling/Surface Metal Mount Box: HA09/W. HA09/B. HA09/G




# Optional Accessory --- Blind Insert for Blocking Certain Detection Angles




WWW.HYTRONIK.COM



Subject to change without notice. HIR28/R-20241009-A2 Subject to change without notice. HIR28/R-20241009-A2

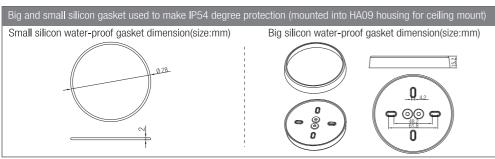


# 7. Description of the Button Functions (remote control HRC-11)

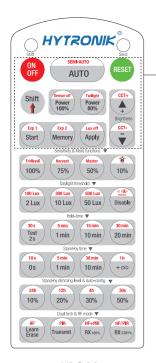

HRC-11

WWW.HYTRONIK.COM

ON OFF	Press button "ON/OFF" to select permanent ON or permanent OFF mode.  * Press button "AUTO") "RESET" to exit this mode.
RESET	Press button "RESET", all settings go back to default. The default settings are: Auto mode; Detection range 100%; Hold-time 5min; Daylight threshold disable; Lux off activated;
Shift	Press button "Shift", the LED on the top left corner is on to indicate mode selection. All values / settings in RED are valid for 20 seconds.
AUT0	Press button "AUTO" to initiate automatic mode. The sensor starts working and all settings remain as before the light is switched ON/OFF;
SEMI-AUTO	Press button "Shift" ,the red LED on.     Press button "SEMI-AUTO" to initiate Semi-auto mode. The sensor is only activated with the manual press of push switch. To exit this mode, simply press button "AUTO".  For Sensor LED indicator references: Remains on 2s, initiate "Semi-auto" mode from "Auto" mode.
Power 100% 80%	This key is not appliable on this product.
Sensor off Twilight	This key is not appliable on this product.
<b>♦</b> •	This key is not appliable on this product.
CCT+ CCT-	This key is not appliable on this product.
Start Memory Apply	1. Press button "Start" to program. 2. Select the buttons in "Detection range", "Daylight threshold", "Hold-time", "Stand-by time", to set all parameters. 3. Press button "Memory" to save all the settings programmed in the remote control. 4. Press button "Apply" to set the settings to each sensor unit(s). For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +~, the steps should be: Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+~", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s).
Lux off	The "Lux off" function is activated as default. When the ambient lux level exceeds the target level continuously for more than 5 minutes, the lights will be turned off.  In AUTO /SEMI-AUTO/Twilight modes, to disable "Lux off":  1. Press "Shiff" button first, the red LED on.  2. Press "Lux off" button, the "Lux Off" function will be deactivated. The lights will not turn off even when the ambient lux level exceeds the target lux level but will dim down the
	brightness to the stand-by lime level.  For Sensor LED indicator references: 1.Fast flash 1s, "Lux off" function activated.  2.Remains on 2s, "Lux off" function deactivated.
Exp 1	"Exp" refer to Expansion, these two buttons are reserved functions and pending future

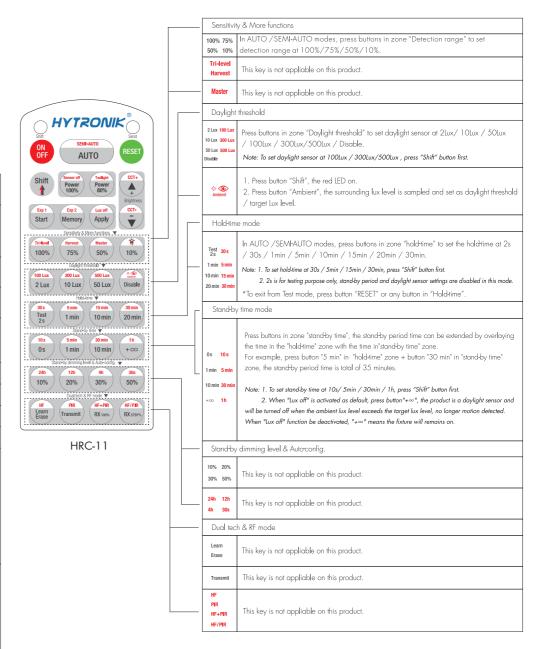

### 8. Additional Information / Documents

- 1. Regarding precautions for PIR sensor installation and operation, please kindly refer to www.hytronik.com/download ->knowledge ->PIR Sensors Precautions for Product Installation and Operation
- 2. Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download ->knowledge ->Hytronik Standard Guarantee Policy





development

Exp 2

Subject to change without notice.