

Daylight Harvest HF Sensor

HCD418/DH

Independent DALI-2 sensor with Photocell Advance™

HYTRONIK®



Applications

Occupancy detector with daylight harvest suitable for building into the fixture:

- Office / Commercial Lighting
- Classroom

Use for new luminaire designs and installations



Features

- 32mA DALI-2 Broadcast output
- Daylight harvest function to regulate light output for maintaining required lux level
- Special photocell to measure and differentiate natural light from LED light from behind the fixture cover
- Tri-level dimming control based upon occupancy (also known as corridor function)
- Synchronised dimming with multiple sensor circuits
- One-key commissioning via programmable remote control
- DALI dimming control method (DALI power supply circuit included)
- 5 Year, 50,000hr Warranty

Technical Data


Input Characteristics	
Mains voltage	220~240VAC 50/60Hz
Stand-by power	<0.5W
Output	I guaranteed: 32mA I max: 40mA U rated: 15VDC
Warming-up	20s

Safety and EMC	
EMC standard (EMC)	EN55015, EN61000
Safety standard (LVD)	EN60669, AS/NZS60669
Radio Equipment (RED)	EN300440, EN301489, EN62479
Certification	Semko, CB, CE, EMC, RED, RCM

Sensor Data	
Sensor principle	High Frequency (microwave)
Operation frequency	5.8GHz +/- 75MHz
Transmission power	<2mW
Detection range	Max. (Ø x H) 12m x 5m
Detection angle	30° ~ 150°
Sensitivity	100% / 75% / 50% / 10%
Hold time	5s ~ 30min (selectable)
Daylight threshold	2Lux / 10Lux / 50Lux / 100Lux / 300Lux / 500Lux / Disable
Stand-by period	0s ~ 1h, +∞ (selectable)
Stand-by dimming level	10% / 20% / 30% / 50%


Environment	
Operation temperature	Ta: -20°C ~ +60°C
Storage temperature	-35°C ~ +80°C
Relative humidity	0 ~ 90%
Insulation	Class II
IP rating	IP20

Mechanical Structure & Dimensions

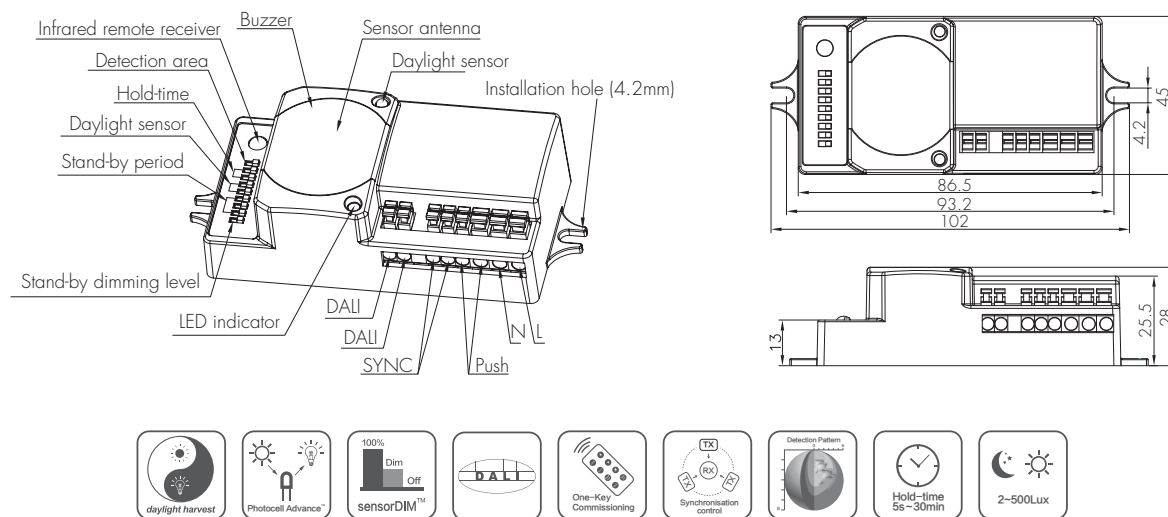

This sensor is specially designed for small scale, decentralised retrofit project, which contains a DALI power supply circuit and gives DALI output to the DALI driver to carry out on/off and dimming command. No extra DALI power supply is needed.

Wiring Diagram

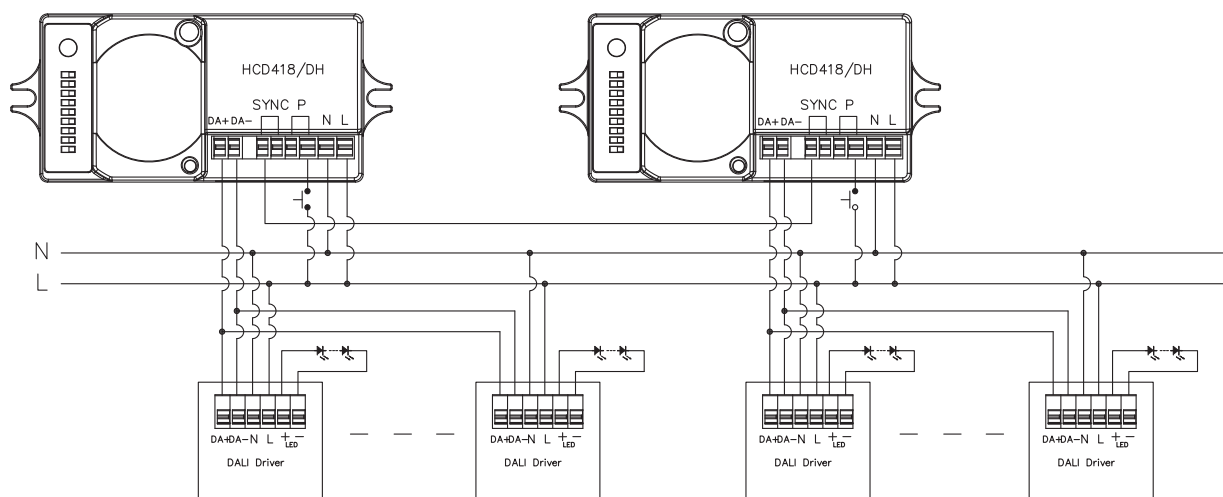


Note: Maximum sync cable length 100m.


1 Photocell Advance™ Function

It's well known that LED lights have a totally different spectrum to natural light. Hytronik uses this principle and comes up with special photocell and sophisticated software algorithm to measure and differentiate natural light from LED light from behind the fixture cover, so that this photocell can ignore internal LED light and only respond to the natural light outside. Our technology has no infringement to the existing patents in the market.


2 Daylight Harvest

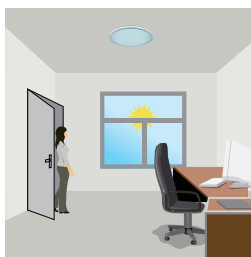


Light will not switch on when natural light is sufficient, even there is motion detected.

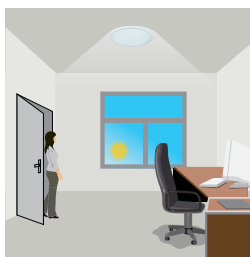


The light switches on automatically with presence when natural light is insufficient.

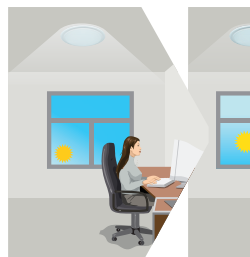

The light turns on at full or dims to maintain the lux level. The light output regulates according to the level of natural light available.

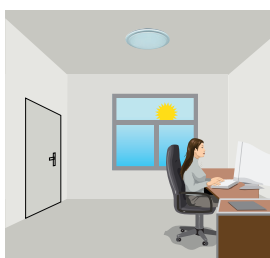

The light switches off when the ambient natural light is sufficient.

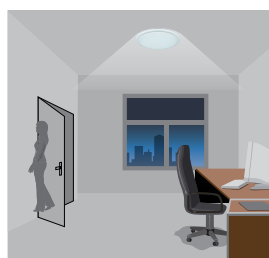

The light dims to stand-by period after hold-time and stays on selected minimum dimming level.



The light switches off completely after the stand-by period.

Note:

1. The light automatically turns on at target dim level or turns off based upon ambient natural light lux level during stand-by period if it is preset to '+∞'.
2. The target lux level can be adjusted by RC or a long press on the push switch.

3 Synchronisation Function

By connecting the "SYNC" terminals in parallel (maximum 10pcs, see wiring diagram), no matter which sensor detects motion, all HCD418/DH in the group will turn on the lights (ambient natural light is below daylight threshold). The detection area is widely enlarged in this way while other settings such as hold-time, stand-by period, stand-by dimming level and daylight threshold on each individual unit stay the same.

4 Manual Override

This sensor reserves the access of manual override function for end-user to switch on/off, or adjust the target lux level by push-switch, which makes the product more user-friendly and offers more options to fit some extra-ordinary demands:

* Short Push (< 1 s): on/off function;

On → Off: the light turns off immediately and cannot be triggered ON by motion until the expiration of pre-set hold-time. After this period, the sensor goes back to normal sensor mode.

Off → On: the light turns on and goes to sensor mode, no matter if ambient Lux level exceeds the daylight threshold or not.


* Long Push (> 1 s): adjust the target lux level by turning the light up or down. Both the adjustment on RC and push switch can overwrite each other, the last adjustment remains in memory.

Note: if end-user do not want this manual override function, just leave the "push" terminal unconnected to any wire.

5 Semi-auto Mode (Absence Detection)

It is easy to forget to switch off the light, in office, corridor, even at home. And in many other cases, people do not want to have a sensor to switch on the light automatically, for example, when people just quickly pass-by, there is no need to have the light on. The solution is to apply this "absence detector": motion sensor is employed, but only activated on the manual press of the push switch, the light keeps being ON in the presence, and dims down in the absence, and eventually switches off in the long absence.


This is a good combination of sensor automation and manual override control, to have the maximum energy saving, and at the same time, to keep efficient and comfortable lighting.

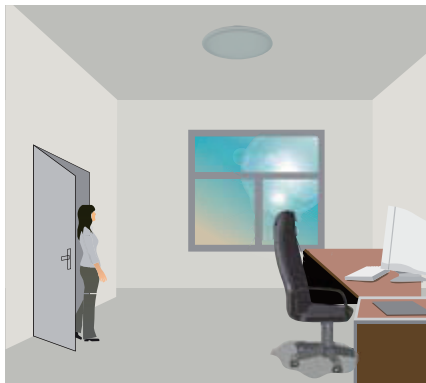

The light does not switch on when there is presence being detected.




Short push to activate the sensor and switch on the light

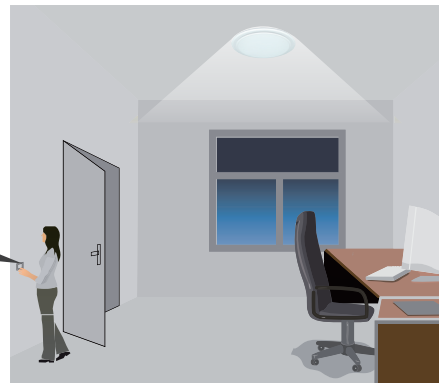


The light turns on full, and the sensor stays in sensor mode.



The light keeps being ON during the presence.

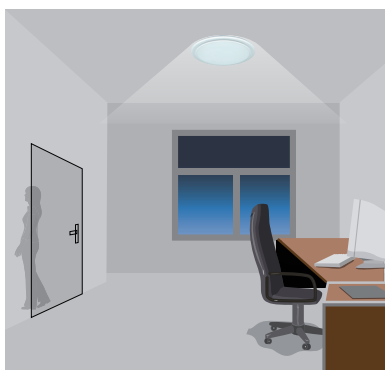



People left, the light dims to stand-by level after the hold-time.

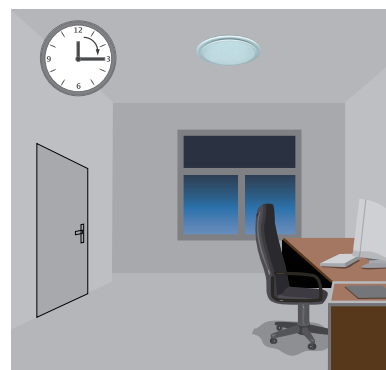

The light switches off automatically after the stand-by period elapses.

Note: end-user can choose either function 4 or function 5 for application. Default function is manual override.

Detection Pattern

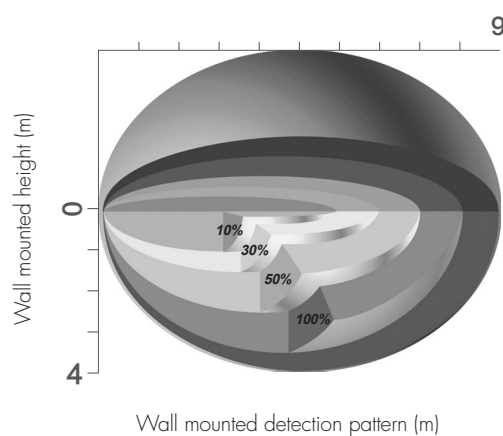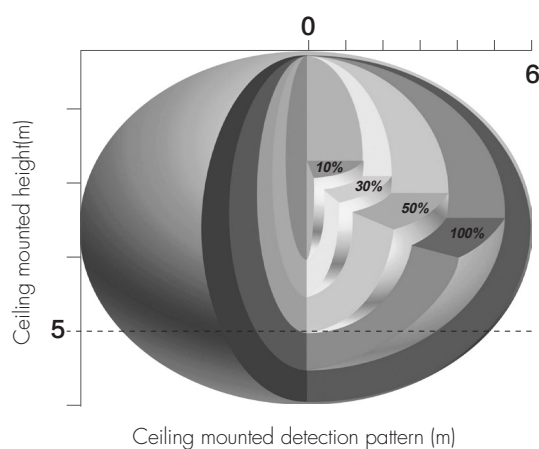

DIP Switch Settings

1 Detection Range

Sensor sensitivity can be adjusted by selecting the combination on the DIP switches to fit precisely for each specific application.

	1	
I	●	100%
II	○	50%



I – 100%

II – 50%

2 Hold Time

Select the DIP switch configuration for the light on-time after presence detection. This function is disabled when natural light is sufficient.

	2	3	
I	●	●	5s
II	●	○	3min
III	○	●	10min
IV	○	○	30min



I – 5s

II – 3min

III – 10min

IV – 30min

3 Daylight Threshold

Set the level according to the fixture and environment. The light will not turn on if ambient lux level exceeds the daylight threshold preset.

Please note that the ambient lux level refers to internal light reaching the sensor.

Disabling the daylight sensor will put the sensor into occupancy detection only mode.

	4	5	
I	●	●	Disable
II	●	○	50Lux
III	○	●	10Lux
IV	○	○	2Lux



I – Disable

II – 50Lux

III – 10Lux

IV – 2Lux

4 Stand-by period (corridor function)

This is the time period you would like to keep at the low light output level before it is completely switched off in the long absence of people.

Note: "0s" means on/off control;

"+∞" means the stand-by period is infinite and the light is effectively controlled by the daylight sensor, off when natural light is sufficient and automatically on at dimming level when insufficient.

	6	7	8	
I	●	●	●	0s
II	●	●	○	10s
III	●	○	●	1min
IV	●	○	○	5min
V	○	●	●	10min
VI	○	●	○	30min
VII	○	○	●	1h
VIII	○	○	○	+∞



I – 0s

II – 10s

III – 1min

IV – 5min

V – 10min

VI – 30min

VII – 1h

VIII – +∞

5 Stand-by dimming level

The setting is used to select the desired dimmed light level used in periods of absence for enhanced comfort and safety.


	9	
I	●	10%
II	○	30%



I – 10%


II – 30%

Settings (Remote Control HRC-11)

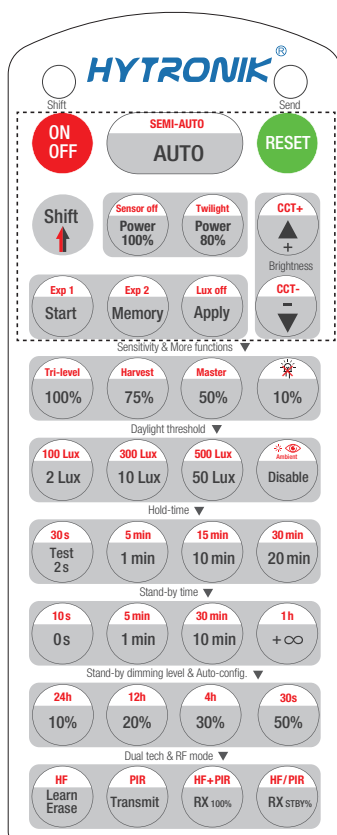

HRC-11

ON OFF	Press button "ON/OFF" to select permanent ON or permanent OFF mode. * Press button "AUTO" / "RESET" / "Ambient" to exit this mode.
RESET	In any state, Press button "RESET", the detector receiver will reset all settings and go back to the default: Exit ON/OFF mode; SEMI-AUTO mode; Twilight mode; Restore to DIP Settings. The default DIP Switch setting is: Induction range 100%, induction delay 5S, waiting time 10S, waiting brightness 10%, light control is not controlled <i>The default settings can be customized.</i>
Shift	Press button "Shift", the LED on the top left corner is on to indicate mode selection. All values / settings in RED are valid for 20 seconds.
AUTO	Press button "AUTO" to exit ON/OFF mode and SEMI-AUTO mode and initiate AUTO mode.
SEMI-AUTO	Press button "SEMI-AUTO" to initiate Semi-auto mode. The sensor is only activated with the manual press of push switch. To exit this mode, simply press button "RESET" or "Auto". <i>For Sensor LED indicator references: Remains on 2s, initiate "Semi-auto" mode from "Auto" mode.</i>
Power 100% 80%	Press buttons in zone "Power out" to select the light output at 80% (at initial 10,000 hours) or 100%.
Sensor off	This key is not applicable on this product.
Twilight	This key is not applicable on this product.
▲ ▼	Press these two buttons to adjust the light output brightness and set a new target lux level. The daylight sensor can measure ambient daylight level and ignore the LED light, to calculate how much artificial light is needed to maintain the target lux level. <i>Dimming and interaction cannot be performed when LUX is set to Disable</i>
CCT+ CCT-	This key is not applicable on this product.
Start Memory Apply	1. Press button "Start" to program. 2. Select the buttons in "Detection range", "Daylight threshold", "Hold-time", "Stand-by time", "Stand-by dimming level" to set all parameters. 3. Press button "Memory" to save all the settings programmed in the remote control. 4. Press button "Apply" to set the settings to each sensor unit(s). <i>For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +∞, stand-by dimming level 30%, the steps should be:</i> <i>Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+∞", "30%", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s).</i>
Lux off	This key is not applicable on this product.
Exp 1 Exp 2	"Exp" refer to Expansion, these two buttons are reserved functions and pending future development.

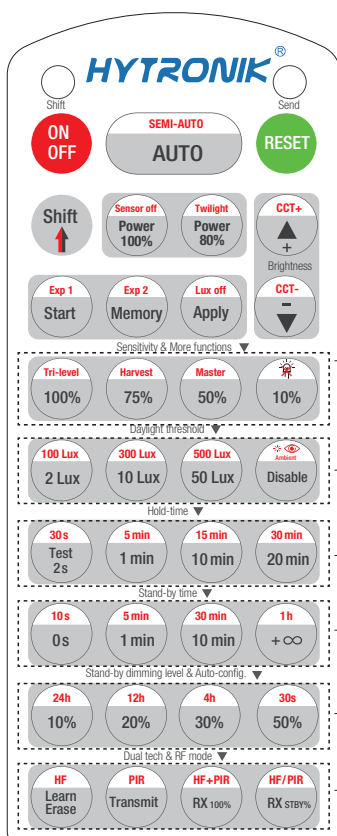

HRC-11

Sensitivity & More functions		
100% 75% 50% 10%	In AUTO /SEMI-AUTO modes, press buttons in zone "Detection range" to set detection range at 100%/75%/50%/10%.	
Tri-level Harvest	This key is not applicable on this product.	
Master	This key is not applicable on this product.	
Daylight threshold		
2 Lux 100 Lux 10 Lux 300 Lux 50 Lux 500 Lux Disable	Press buttons in zone "Daylight threshold" to set daylight sensor at 2Lux/ 10Lux / 50Lux / 100Lux / 300Lux/500Lux / Disable. <i>Note: To set daylight sensor at 100Lux/300Lux/500Lux, press "Shift" button first.</i>	
	1. Press button "Shift", the red LED on. 2. Press button "Ambient", the surrounding lux level is sampled and set as daylight threshold / target Lux level.	
Hold-time mode		
Test 2s 30s 1 min 5 min 10 min 15 min 20 min 30 min	In AUTO /SEMI-AUTO modes, press buttons in zone "hold-time" to set the hold-time at 2s / 30s / 1min / 5min / 10min / 15min / 20min / 30min. <i>Note: 1. To set hold-time at 30s / 5min / 15min / 30min, press "Shift" button first. 2. 2s is for testing purpose only, stand-by period and daylight sensor settings are disabled in this mode.</i> *To exit from Test mode, press button "RESET" or any button in "Hold-time".	
Stand-by time mode		
0s 10s 1 min 5 min 10 min 30 min +∞ 1h	Press buttons in zone "stand-by time" to set the stand-by period at 0s / 10s / 1min / 5min / 10min / 30min / 1h / +∞. <i>Note: 1. To set stand-by-time at 10s/ 5min / 30min / 1h, press "Shift" button first. 2. "0s" means on/off control; 3. "+∞" means bi-level control, the fixture is 100% on when there is motion detected, and remains at the stand-by dimming level when no presence after motion hold-time. Only when the stand-by time is set in "+∞" and the ambient lux level is below the target lux level, the lux will auto-on.</i>	
Stand-by dimming level & Auto-config.		
10% 20% 30% 50%	Press the button in zone "stand-by dimming level" to set the stand-by dimming level at 10% / 20% / 30% / 50%.	
24h 12h 4h 30s	1.Press button "Shift" ,the red LED on. 2.Select a time period and the sensor will do light level measurement and determine/save the lowest light level (commission line) with 100% light on, so as to set the target lux level automatically. <i>Note:1.Make sure the light level measurement covers the night time. 2.The fixture will go into sensor mode after the measurement, all sensor setting remain unchanged.</i>	
Dual tech & RF mode		
Learn Erase Transmit	This key is not applicable on this product.	
RX 100% RX STBY%	This key is not applicable on this product.	
HF PIR HF+PIR HF/PIR	This key is not applicable on this product.	

Commissioning Instructions and Precautions

A. Installation Preparations

1. This product should be installed by a qualified electrician.

B. DALI-2 Compliance

2. This product has been tested in accordance with IEC 62386 and complies with the relevant DALI-2 application parts. DALI-2 testing was performed using the official DALI test sequence software (version 2.4.0.0), covering the applicable IEC 62386 parts (e.g. Part 101, Part 103). DALI-2 certification verifies compliance within the defined test scope. However, certification does not eliminate the possibility of system-level compatibility issues arising from differences in device implementation or system design among manufacturers. Therefore, functional verification and on-site testing are required as part of the final system commissioning to ensure proper operation and compliance with project requirements.

Warning: For additional important documents, including installation precautions, product guidelines, and guarantee conditions, please refer to <https://hytronik.com/service/downloads>

Additional Information / Documents

1. To learn more about detailed product features/functions, please kindly refer to <https://hytronik.com/product/hcd418-dh>
2. Regarding precautions for PIR Sensors installation and operation, please kindly refer to <https://hytronik.com/service/downloads> (PIR Sensors Precautions for Product Installation and Operation)
3. Regarding Hytronik standard guarantee policy, please kindly refer to <https://hytronik.com/service/downloads> (Guarantee Conditions document)