

Installation and Instruction Manual

HYTRONIK®

FLUSH MOUNT PIR MOTION SENSOR

One DALI-2 Channel Output


1. Technical Specifications

Mains voltage	220–240VAC 50/60Hz
Stand-by power	<0.5W
DALI bus power supply	I guaranteed: 64mA I max.: 80mA U rated: 16VDC
Warming-up	Appl. 20s
Sensor principle	PIR detection
Detection range (Max.)*	Installation height: 15m (forklift) 12m (person) Detection range (Ø): 24m
Detection angle	360°
Operation temperature	Ta = -20°C ~ +50°C
IP rating	IP20 / IP54

3. Functions

3.1 Daylight Harvest (Daylight Regulating)

Daylight sensor measures the available surrounding natural light, calculates how much electrical light is needed to reach the total lux expected. The demand is given to the LED driver by DALI signal, so as to deliver the needed amount of electric light.

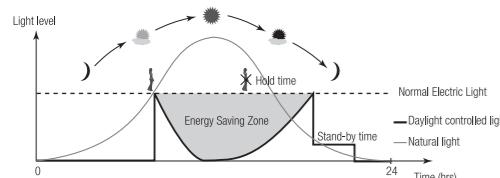

3.2 Manual Override

With the help of push-switch, this sensor can be over-ridden by the end-user to manually switch on/off the light, which makes the product more user-friendly and offers more options to fit some extra-ordinary demands:

- * Short Push (<1s): on/off function:
On → Off: the light turns off immediately and cannot be triggered ON by motion until the expiration of pre-set hold-time. After this period, the sensor goes back to normal sensor mode.
Off → On: the light turns on and goes to sensor mode, no matter if ambient Lux level exceeds the daylight threshold or not.
- * Long Push (>1s): adjust the target lux level by turning the light up or down. Both the adjustment on remote control and push switch can overwrite each other. The last adjustment remains in memory.

Note: if end-user do not want this manual override function, just leave the "push" terminal unconnected to any wire.

3.3 Semi-auto Mode (Absence Detection)

Selecting this mode will activate the following logic:

Manual on - The lights will not switch on until they have manually been switched on at the wall switch. The occupancy sensor is inactive whilst the lights are off.

Auto off - When the lights are on, the sensor becomes active and monitors the space for activity. Once the area is vacated (absence selection), the sensor will automatically switch off the lights if the last person out forgets to switch off the light manually.


Note: The wall switch can be assigned to function 3.2 or 3.3, but not both. The default function is manual override.

3.4 Synchronisation Function

By connecting the "SYNC" terminals in parallel (see wiring diagram), no matter which sensor detects motion, all HIR27/H in the group will turn on the lights when surrounding natural light is below the daylight threshold. The detection area could be widely enlarged in this way.

HYTRONIK®

Wire Preparation

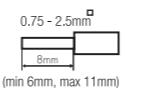


Pluggable screw terminal. It is recommended to make connections to the terminal before fitting to the sensor.


1. 200 metres (total) max. for 1mm² CSA (Ta = 50°C)
2. 300 metres (total) max. for 1.5mm² CSA (Ta = 50°C)

2. Installation

Mechanical Structure & Dimensions

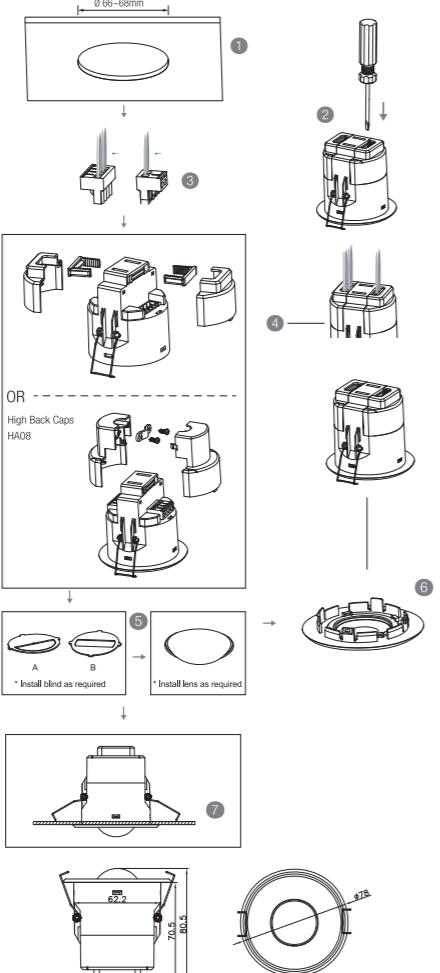

Wiring Diagram

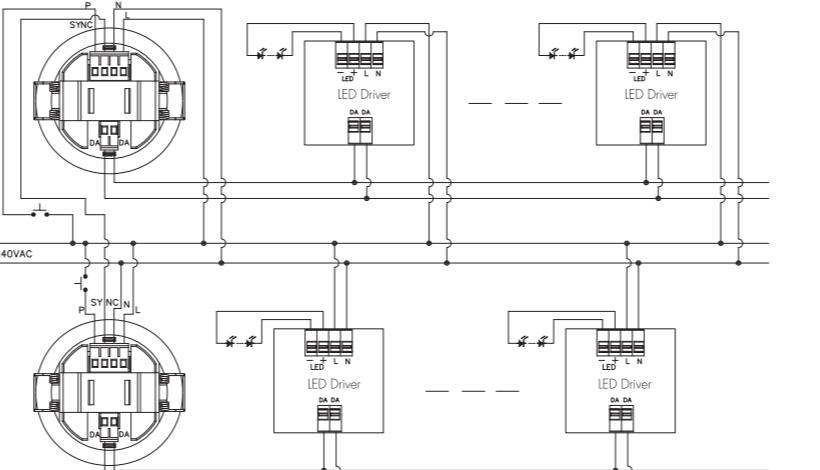

This product should be installed by a qualified electrician.

4. Detection Pattern & Optional Accessories

HIR27/H (High-bay)


HIR27/H: High-bay lens detection pattern for forklift @ Ta = 20°C
(Recommended ceiling mount installation height 10m-15m)

	A: Tangential movement	B: Radial movement	Mount height	Tangential (A)	Radial (B)
10m	max 380m² (Ø = 22m)	max 201m² (Ø = 16m)			
11m	max 452m² (Ø = 24m)	max 201m² (Ø = 16m)			
12m	max 452m² (Ø = 24m)	max 201m² (Ø = 16m)			
13m	max 452m² (Ø = 24m)	max 177m² (Ø = 15m)			
14m	max 452m² (Ø = 24m)	max 133m² (Ø = 13m)			
15m	max 452m² (Ø = 24m)	max 113m² (Ø = 12m)			

HIR27/H: High-bay lens detection pattern for single person @ Ta = 20°C
(Recommended ceiling mount installation height 2.5m-12m)

	A: Tangential movement	B: Radial movement	Mount height	Tangential (A)	Radial (B)
2.5m	max 50m² (Ø = 8m)	max 7m² (Ø = 3m)			
6m	max 104m² (Ø = 11.5m)	max 7m² (Ø = 3m)			
8m	max 154m² (Ø = 14m)	max 7m² (Ø = 3m)			
10m	max 227m² (Ø = 17m)	max 7m² (Ø = 3m)			
11m	max 269m² (Ø = 18.5m)	max 7m² (Ø = 3m)			
12m	max 314m² (Ø = 20m)	max 7m² (Ø = 3m)			

Optional Accessory --- HA08

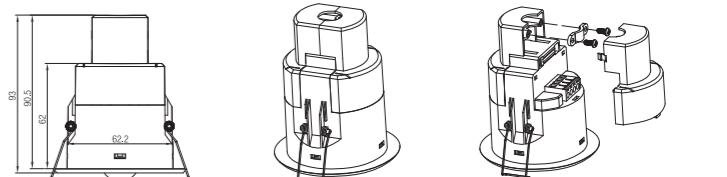

*Note: Optional Accessory HA09 & HA08 can not be used together.


HYTRONIK®

HYTRONIK®

Optional Accessory --- Ceiling/Surface Metal Mount Box: HA09/W, HA09/B, HA09/G




Optional Accessory --- Blind Insert for Blocking Certain Detection Angles

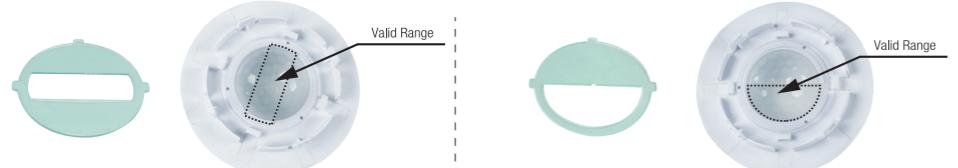


Big and small silicon gasket used to make IP54 degree protection (mounted into HA09 housing for ceiling mount)


Small silicon water-proof gasket dimension(size:mm)

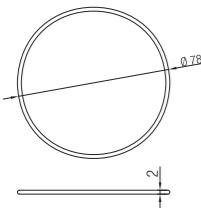

Big silicon water-proof gasket dimension(size:mm)

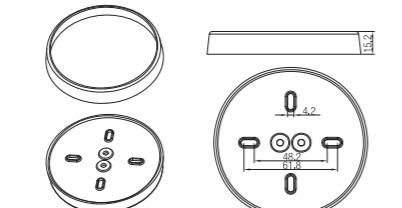


5. Description of the Button Functions (remote control HRC-11)

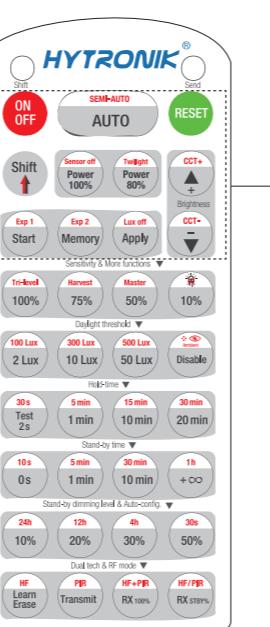

HRC-11

ON OFF	Press button "ON/OFF" to select permanent ON or permanent OFF mode. * Press button "AUTO"/"RESET" to exit this mode.
RESET	Press button "RESET", all settings go back to default. The default settings are: Auto mode; Holdtime 5min; Daylight sensor 100 lux; Standby time 10min; Stand-by dimming level: 20%; Lux off activated;
Shift ↑	Press button "Shift", the LED on the top left corner is on to indicate mode selection. All values / settings in RED are valid for 20 seconds.
AUTO	Press button "AUTO" to initiate automatic mode. The sensor starts working and all settings remain as before the light is switched ON/OFF;
SEMI-AUTO	1. Press button "Shift", the red LED on. 2. Press button "SEMI-AUTO" to initiate Semi-auto mode. The sensor is only activated with the manual press of push switch. To exit this mode, simply press button "AUTO"/"RESET". For Sensor LED indicator references: Remains on 2s, initiate "Semi-auto" mode from "Auto" mode.
Power 100% 80%	Press buttons in zone "Power out" to select the light output at 80% (at initial 10,000 hours) or 100%.
Sensor off	This key is not applicable on this product.
Twilight	1. Press button "Shift", the red LED on. 2. Press button "Twilight", the function of movement detection is disabled, but the function of photocell is still working, and the product becomes a pure dusk/ dawn daylight sensor. To exit from "Twilight" mode, press button "AUTO"/"SEMI-AUTO"/"RESET".
↑ ↓	Press these two buttons to adjust the light output brightness and set a new target lux level. The daylight sensor can measure ambient daylight level and ignore the LED light, so as to calculate how much artificial light is needed to maintain the target lux level.
CCT+ CCT-	This key is not applicable on this product.
Start Memory Apply	1. Press button "Start" to program. 2. Select the buttons in "Detection range", "Daylight threshold", "HoldTime", "Standby time", "Standby dimming level" to set all parameters. 3. Press button "Memory" to save all the settings programmed in the remote control. 4. Press button "Apply" to set the settings to each sensor unit(s). For example, to set detection range 100%, daylight threshold Disable, hold-time 5min, stand-by time +∞, stand-by dimming level 30%, the steps should be: Press button "Start", button "100%", "Disable", "Shift", "5min", "Shift", "+∞", "30%", "Memory". By pointing to the sensor unit(s) and pressing "Apply", all settings are passed on the sensor(s).
Lux off	The "Lux off" function is activated as default. When the ambient lux level exceeds the target level continuously for more than 5 minutes, the lights will be turned off. In AUTO /SEMI-AUTO/Twilight modes, to disable "Lux off": 1. Press "Shift" button first, the red LED on. 2. Press "Lux off" button, the "Lux Off" function will be deactivated. The lights will not turn off even when the ambient lux level exceeds the target lux level but will dim down the brightness to the stand-by time level. For Sensor LED indicator references: 1.Fast flash 1s, "Lux off" function activated. 2.Remains on 2s, "Lux off" function deactivated.
Exp 1 Exp 2	"Exp" refer to Expansion, these two buttons are reserved functions and pending future development.

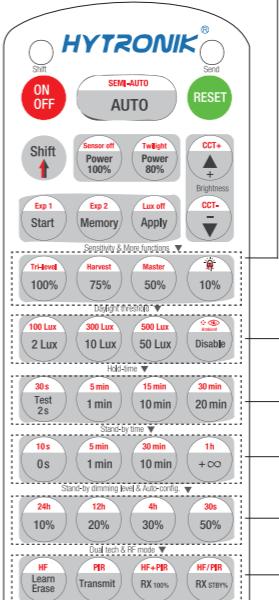

HRC-11

Sensitivity & More functions	
100% 75% 50% 10%	This key is not applicable on this product.
Tri-level Harvest	This key is not applicable on this product.
Master	This key is not applicable on this product.
Daylight threshold	
2 Lux 100 Lux 10 Lux 300 Lux 50 Lux 500 Lux Disable	Press buttons in zone "Daylight threshold" to set daylight sensor at 2lux/ 10lux / 50lux / 100lux / 300lux/500lux / Disable. Note: To set daylight sensor at 100lux / 300lux/500lux , press "Shift" button first.
Ambient	1. Press button "Shift", the red LED on. 2. Press button "Ambient", the surrounding lux level is sampled and set as daylight threshold / target lux level.
Hold-time mode	
Test 2s 1min 10min 20min 30min	In AUTO /SEMI-AUTO modes, press buttons in zone "holdtime" to set the holdtime at 2s / 30s / 1min / 5min / 10min / 15min / 20min / 30min. Note: 1. To set hold-time at 30s / 5min / 15min / 30min, press "Shift" button first. 2. 2s is for testing purpose only, stand-by period and daylight sensor settings are disabled in this mode. *To exit from Test mode, press button "RESET" or any button in "Holdtime".
Stand-by time mode	
0s 10s 1min 5min 10min 30min +∞ 1h	Press buttons in zone "stand-by time" to set the stand-by period at 0s / 10s / 1min / 5min / 10min / 30min / 1h / +∞. Note: 1. To set stand-by-time at 10s / 5min / 30min / 1h, press "Shift" button first. 2. "0s" means on/off control; 3. "+∞" means bi-level control, the fixture is 100% on when there is motion detected, and remains at the stand-by dimming level when no presence after motion hold-time. Only when the stand-by time is set in "+∞" and the ambient lux level is below the target lux level, the lux will auto-on.
Stand-by dimming level & Auto-config.	
10% 20% 30% 50%	Press the button in zone "stand-by dimming level" to set the stand-by dimming level at 10% / 20% / 30% / 50%.
24h 12h 4h 30s	1. Press button "Shift", the red LED on. 2. Select a time period and the sensor will do light level measurement and determine/save the lowest light level (commission line) with 100% light on, so as to set the target lux level automatically. Note: 1. Make sure the light level measurement covers the night time. 2. The fixture will go into sensor mode after the measurement, all sensor setting remain unchanged.
Dual tech & RF mode	
Learn Erase	This key is not applicable on this product.
Transmit	This key is not applicable on this product.
HF PIR HF+PIR HF/PIR	This key is not applicable on this product.

6. Additional Information / Documents

- Regarding precautions for PIR sensor installation and operation, please kindly refer to www.hytronik.com/download->knowledge->PIR Sensors - Precautions for Product Installation and Operation
- Regarding Hytronik standard guarantee policy, please refer to www.hytronik.com/download->knowledge->Hytronik Standard Guarantee Policy